

Electrical Test Program - Component Locations

Component Locations

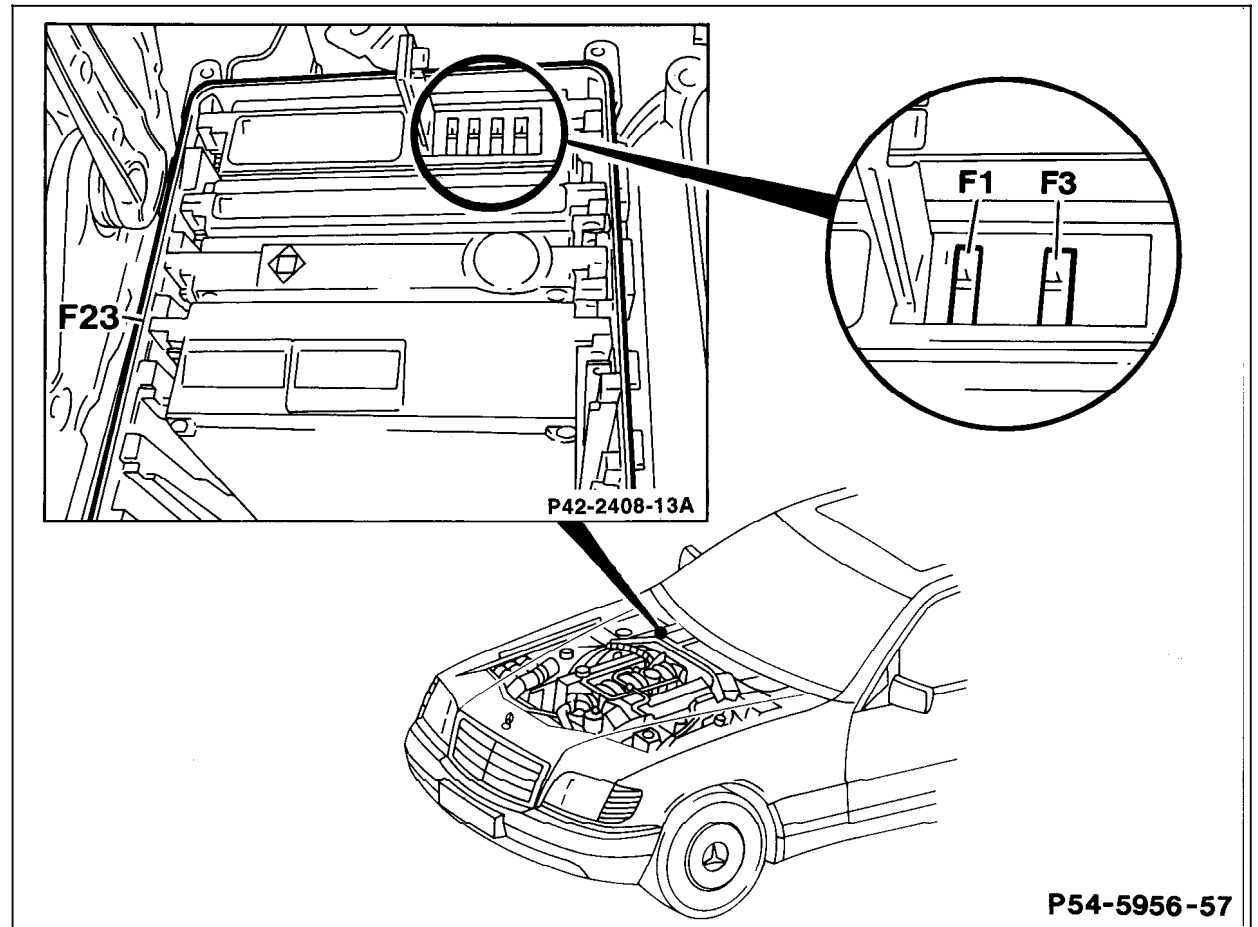


Figure 1

- N16/1 Base module (BM)
- F1 Fused voltage supply for Stop lamp switch (S9/1), ABS (N30) or ABS/ASR (N30/1) control module, Data link connector (X11/4)
- F3 Fused voltage supply for SPS (N49/1), ADS (N51), Transmission (N15/1) control modules, TR "D" contact switch (S16/9), Comfort/sport switch (S45/1)
- F23 Module box

P54-5956-57

P54-5956-57