


Electrical Test Program – Component Locations

Model 163

The transfer case control module (N78) is located forward of the transmission selector lever under the center console.

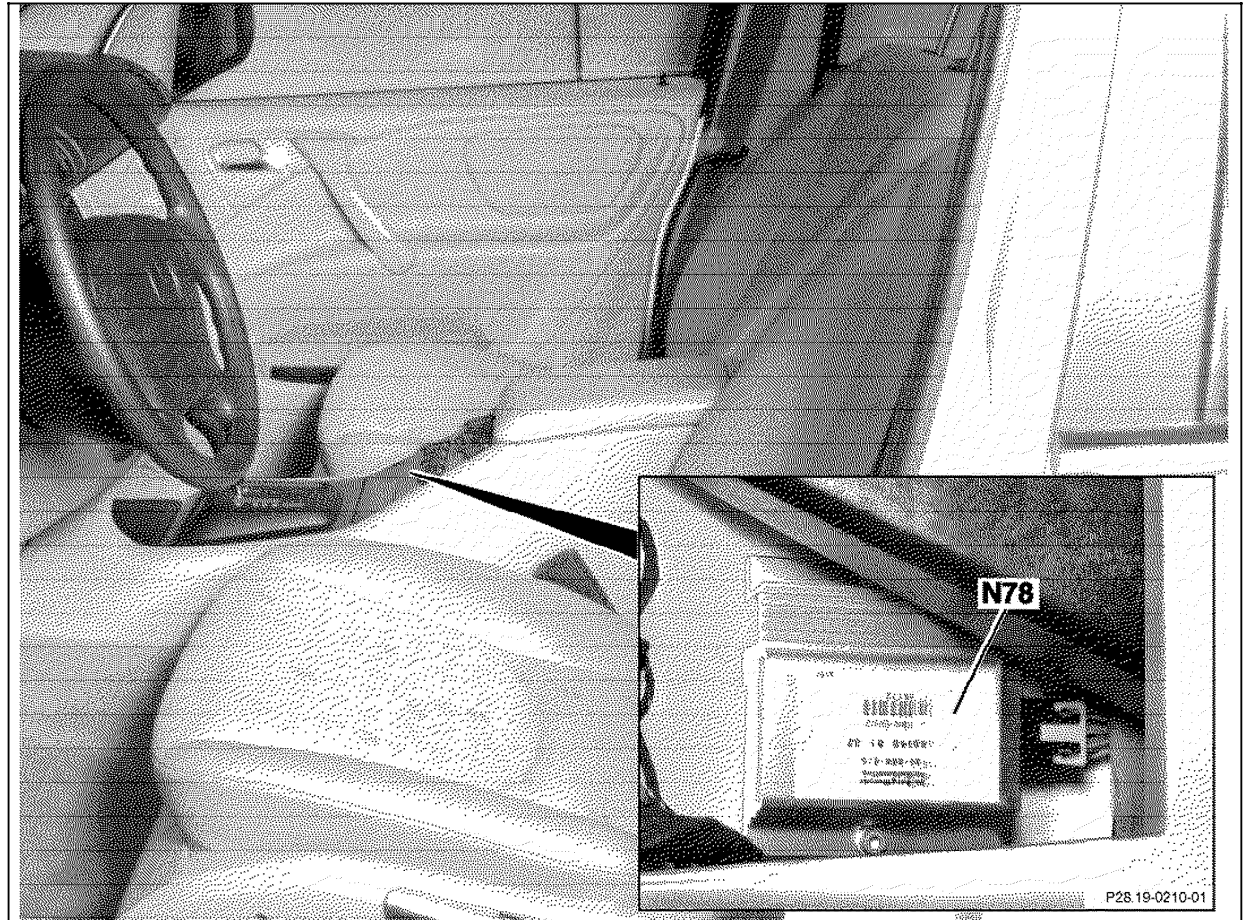


N78 Transfer case control module

P28.19-0205-06

Electrical Test Program – Component Locations

Model 163

The transfer case range selection motor (A55) is located and bolted to the rear side of the transfer case

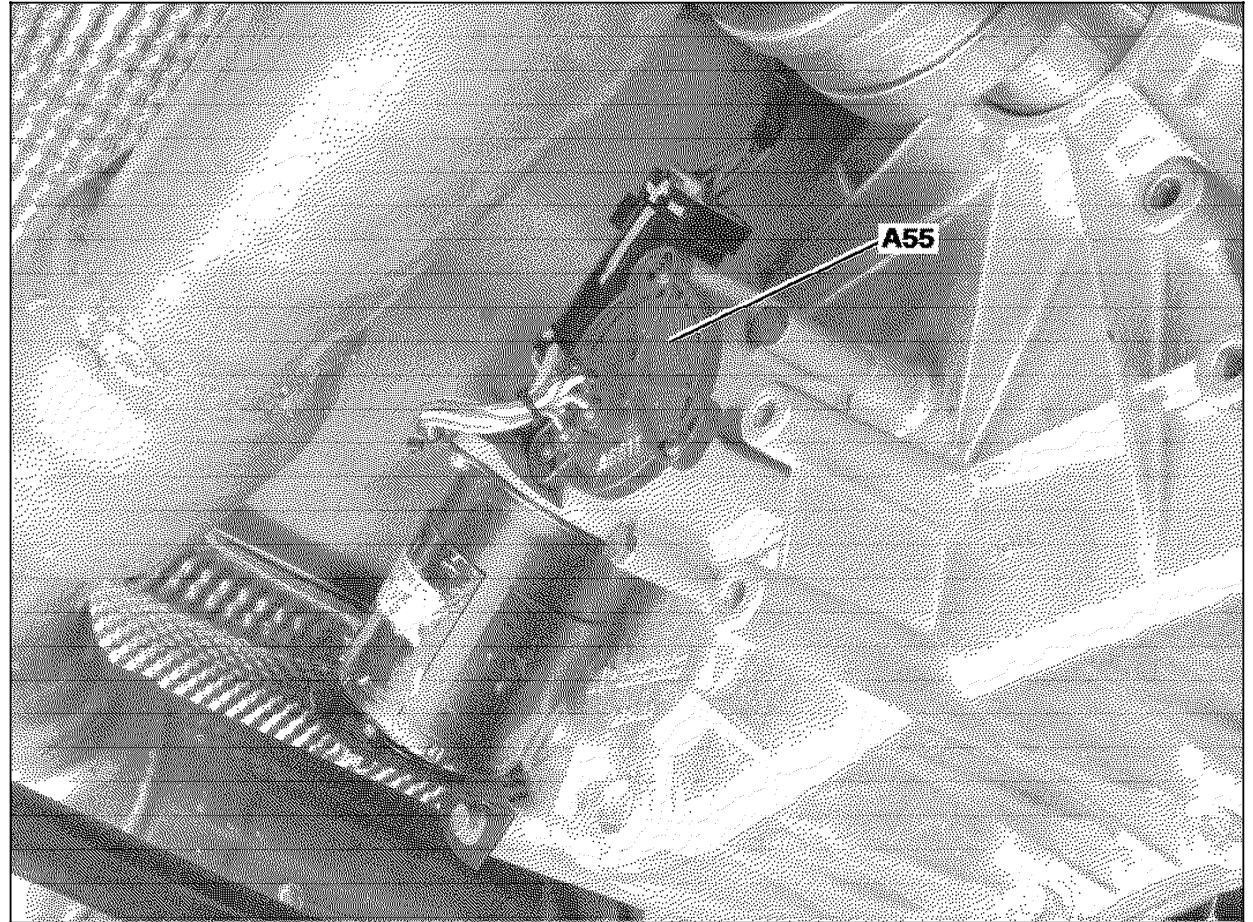


A55 Transfer case range selection motor

P28.19-0204-06

Electrical Test Program – Component Locations

Model 163

The "low range" switch (S97/6) is located in the upper center portion of the center console

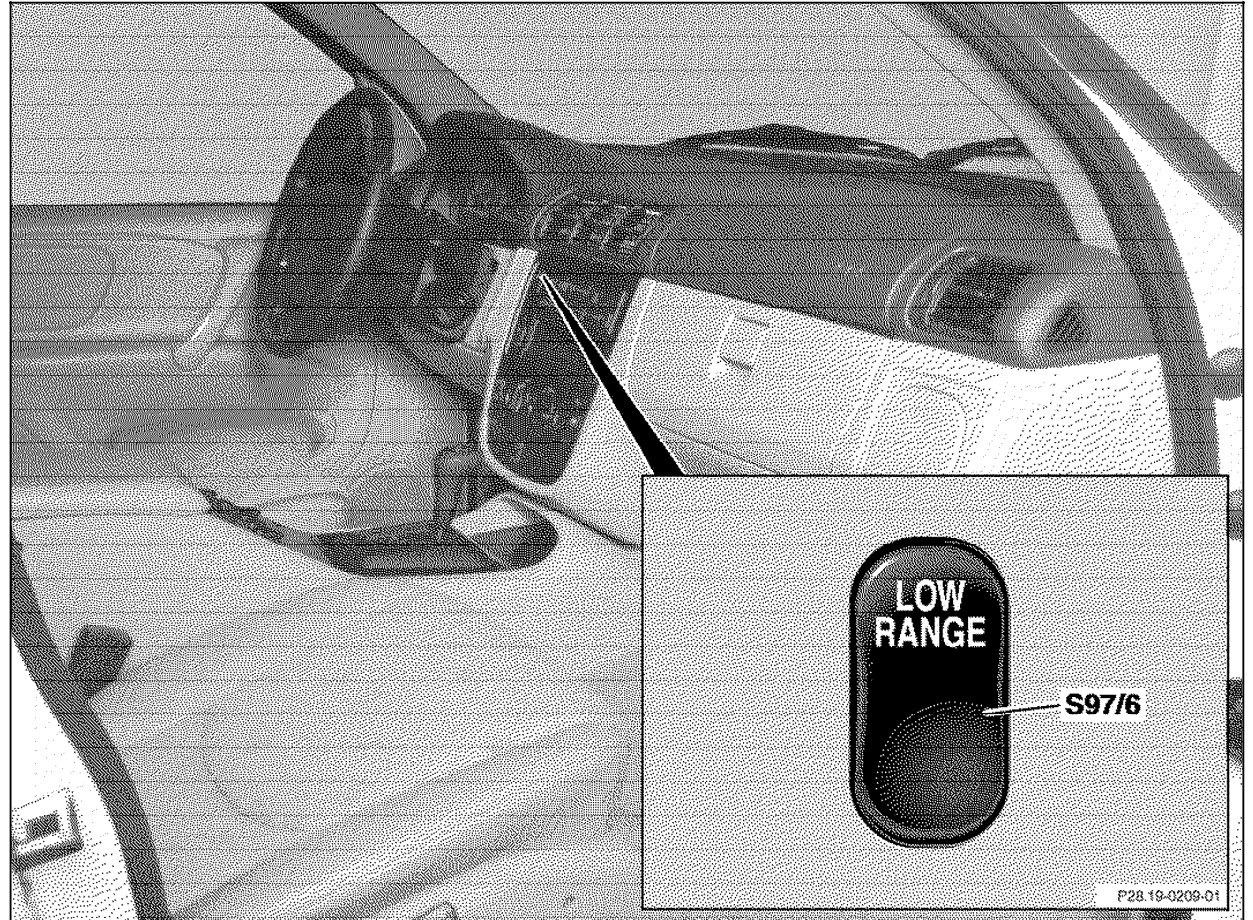


S97/6 "Low range" switch

P28.19-0206-06

Electrical Test Program – Component Locations

Model 163

The LOW RANGE indicator lamp (A1e53) is located in the left hand portion of the instrument cluster (A1)

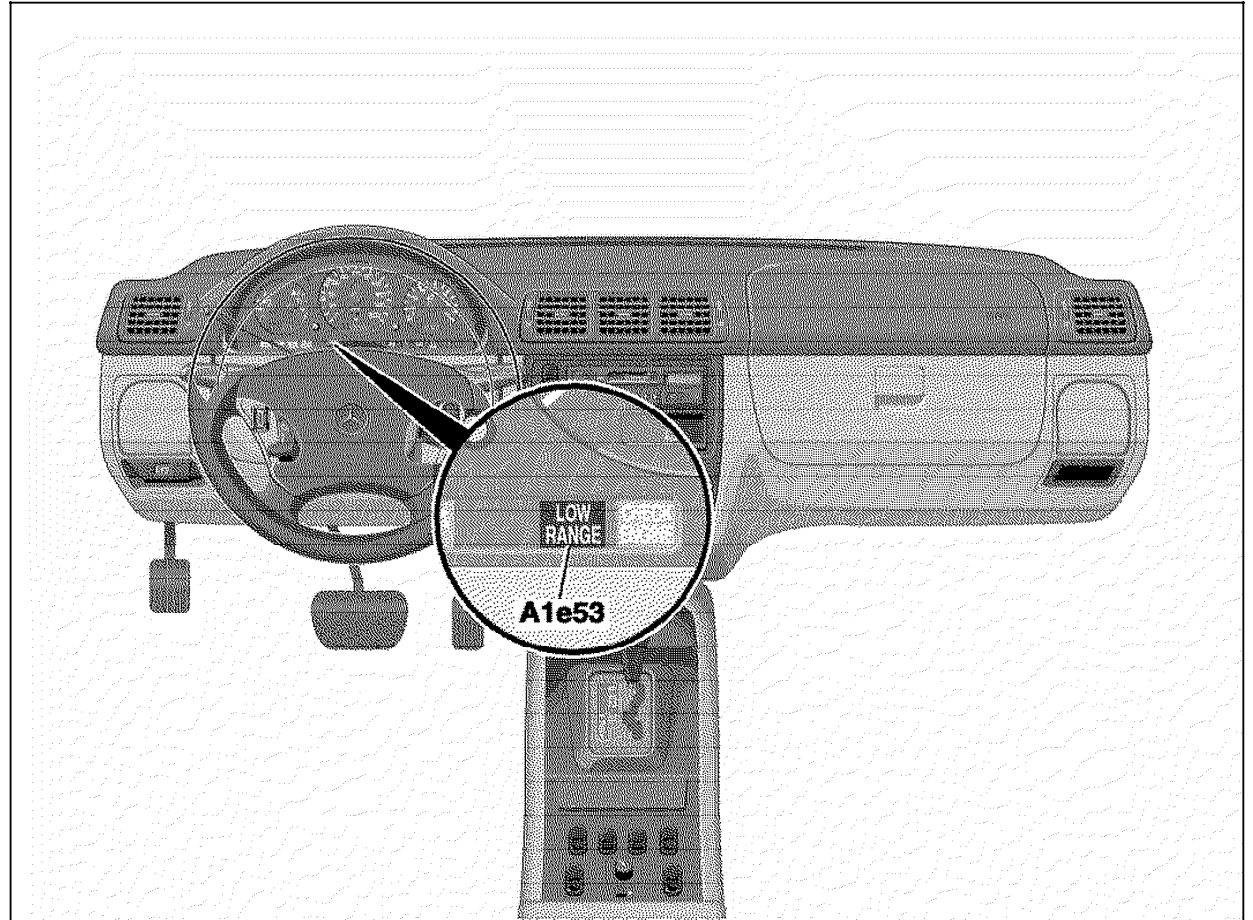

A1e53 LOW RANGE indicator lamp

P28.19-0207-06