
## **Hydraulic Test Program – Component locations**

Figure 1	
4a	Brake fluid suply reservoir
6a	Right rear brake caliper
6b	Left rear brake caliper
13	Pressure reservoir
20	Free play rod (redundancy rod)
A1e17	ABS malfunction indicator lamp
A1e21	ASR function indicator lamp
A1e22	ASR malfunction indicator lamp
A7/3	ABS/ASR hydraulic unit
K1/2	Overvoltage protection relay module
	(87E/87L/30a, 9-pole)
L6/1	Left front axle vehicle speed sensor
L6/2	Right front axle vehicle speed sensor
L6/3	Left rear axle vehicle speed sensor
L6/4	Right rear axle vehicle speed sensor
M15	ASR charging pump
M16/1	Electronic accelerator/cruise control actuator
N4/1	Electronic accelerator/cruise control module
N30/1	ABS/ASR control module
R25	Accelerator pedal position sensor
S9/1	Stop lamp switch (ASD/ASR)
S40	Cruise control switch
S76	Snow chain switch (ASR) switch indicator

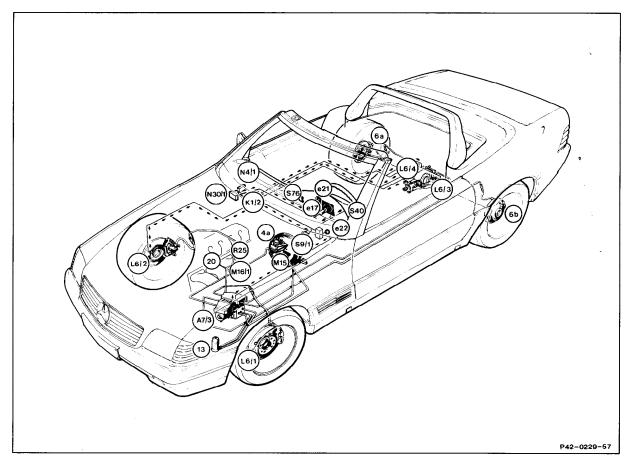

P42-0229-57