
Electrical Test Program - Component Locations

Electrical Components on Front Axle and in Engine Compartment

Figure 1

A7/3 ABS/ASR hydraulic unit
L6/1 Left front axle VSS sensor
L6/2 Right front axle VSS sensor
M15 ASR charging pump
N16/1 Base module (BM)
N30/1 ABS/ASR control module
X11/4 Data link connector (DTC reac

X11/4 Data link connector (DTC readout)
Y61 Master brake cylinder switchover valve

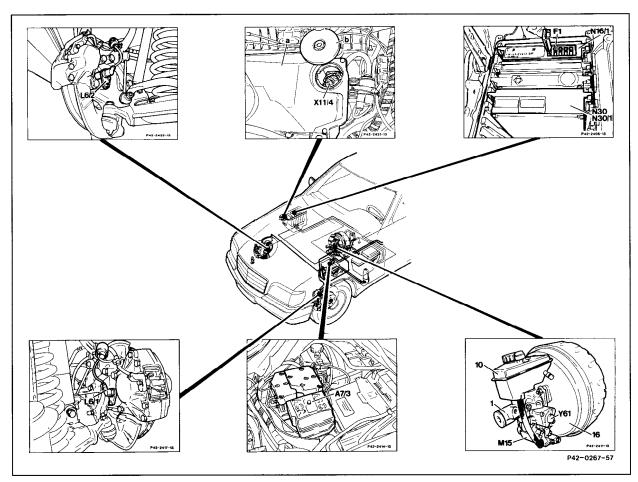

P42-0267-57

Electrical Test Program - Component Locations


Electrical Components on the Rear Axle and in Passenger Compartment

Figure 2

A1 Instrument cluster
A1e17 ABS MIL
A1e21 ASR warning lamp

A1e22 ASR MIL

B24/2 ASR lateral acceleration sensor L6/3 Left rear axle VSS sensor L6/4 Right rear axle VSS sensor

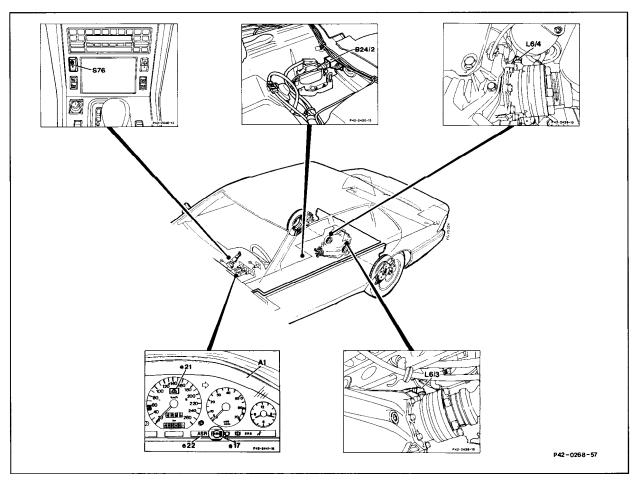

P42-0268-57