 


P42-5075-57


050	Socket box, (126-pole)
070	Contact box
072	Contact module 2
10	Brake bleeder
11	Pressure tester



- 1. Connect brake bleeder.
- 2. Release system pressure. Ignition: OFF. Open vent screw "SP" on ABS/ASR hydraulic unit (A7/3) and allow contents of pressure reservoir to drain into container for brake fluid.
- Connect pressure tester to "SP" on ABS/ASR hydraulic unit (A7/3). 3.

A hydraulic oil system pressure tester may not be used on a brake fluid system. The mineral oil in the tester will mix with the brake fluid and result in brake failure!

- 4. Ignition: **OFF**.
- 5. Disconnect ABS/ASR control module (N30/1).
- 6. Connect socket box with contact module 2 according to connection diagram (only needed for \Rightarrow 1.0).
- 7. Release system pressure by opening vent screw (d) on pressure tester (11).
- 8. Upon completion of test, load pressure reservoir (connect N30/1 and Engine: at Idle until reservoir is full), and then correct fluid level in brake fluid reservoir.

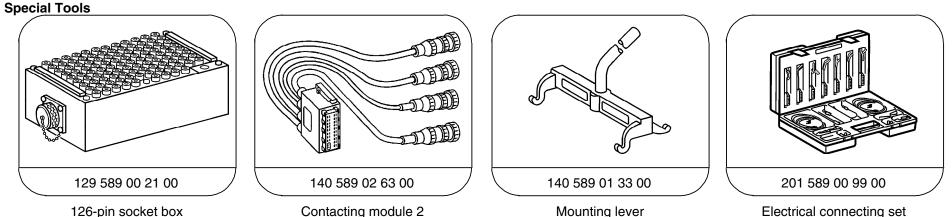


126-pin socket box

Contacting module 2

Electrical connecting set

Special Tools

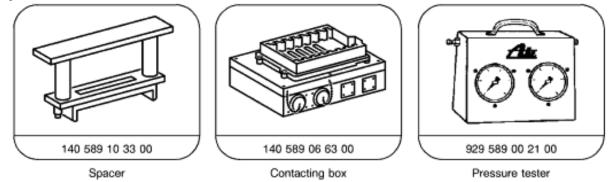

Equipment


.

Brake bleeder 1)

Ammco model 7301 with adaptor no. 7309

¹⁾ Available through the MBUSA Standard Equipment Program.

Connection Diagram - Pressure Tester ABS/ASR hydraulic unit (A7/3) connection "SP"

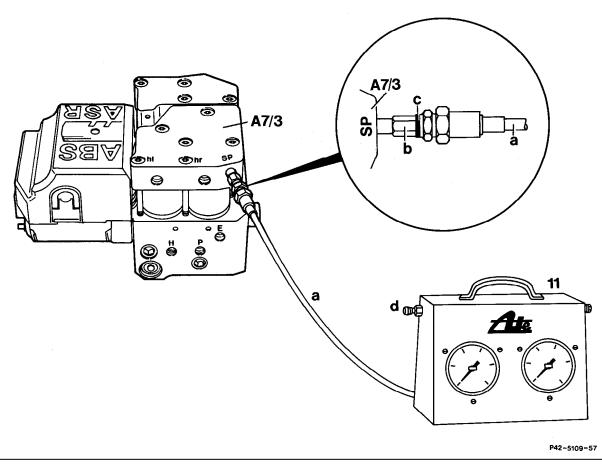

P42-5109-57

d Vent screw

Pressure tester

Hose

Seal

Adaptor

ABS/ASR hydraulic unit

Figure 2 A7/3


11

a b

С

.

Connection Diagram - Socket Box Model 124 (only needed for \Rightarrow 1.0)

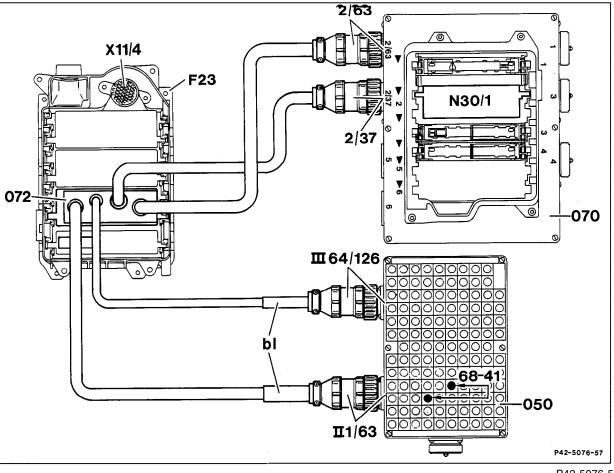

P42-5076-57

050	Socket box, (126-pole)
072	Contact module 2
F23	Module box
X11/4	Data link connector
bl	blue

Connection Diagram - Socket Box Model 129 (only needed for \Rightarrow 1.0)

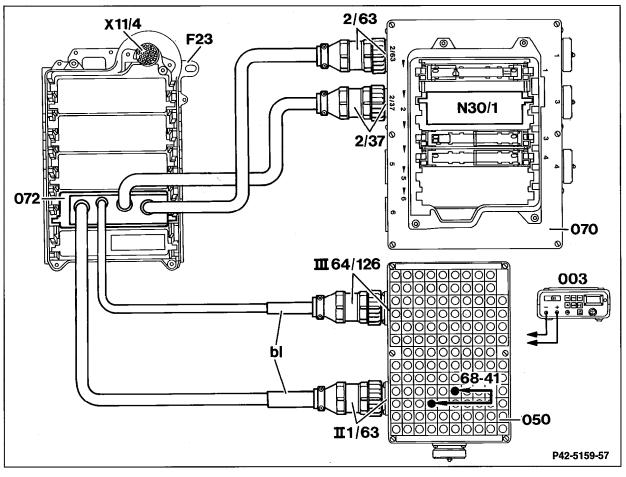


Figure 4

050	Socket box, (126-pole)
072	Contact module 2
F23	Module box
X11/4	Data link connector
bl	blue



Connection Diagram - Socket Box Model 140 (only needed for \Rightarrow 1.0)



050	Socket box, (126-pole)
072	Contact module 2
F23	Module box
X11/4	Data link connector
bl	blue

