


Diagnosis - Function Test

Test step/Test sequence	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 1.0 Brake torque control circuit	<p>Lift rear of vehicle so that both rear wheels can be rotated freely.</p> <p>Secure vehicle</p> <p>Engine: Start</p> <p>Selector lever in transmission range "D".</p> <p>Apply full throttle using accelerator pedal.</p> <p> CAUTION!</p> <p>Should ASR not come into effect:</p> <p>Reduce throttle to an idle immediately.</p>	<p>The rear wheels are noticeably braked; simultaneously the return/pressure pump can be audibly heard operating.</p> <p>Engine speed is reduced to approx. 1000 rpm.</p>	<p>23, 33,</p> <p>Diagnostic Manual, Engines, Vol. 3, section 6.4</p>

¹⁾ Observe Preparation for Test, see 22.