

Electrical Test Program - Component Locations

Electrical Components on Front Axle and in Engine Compartment

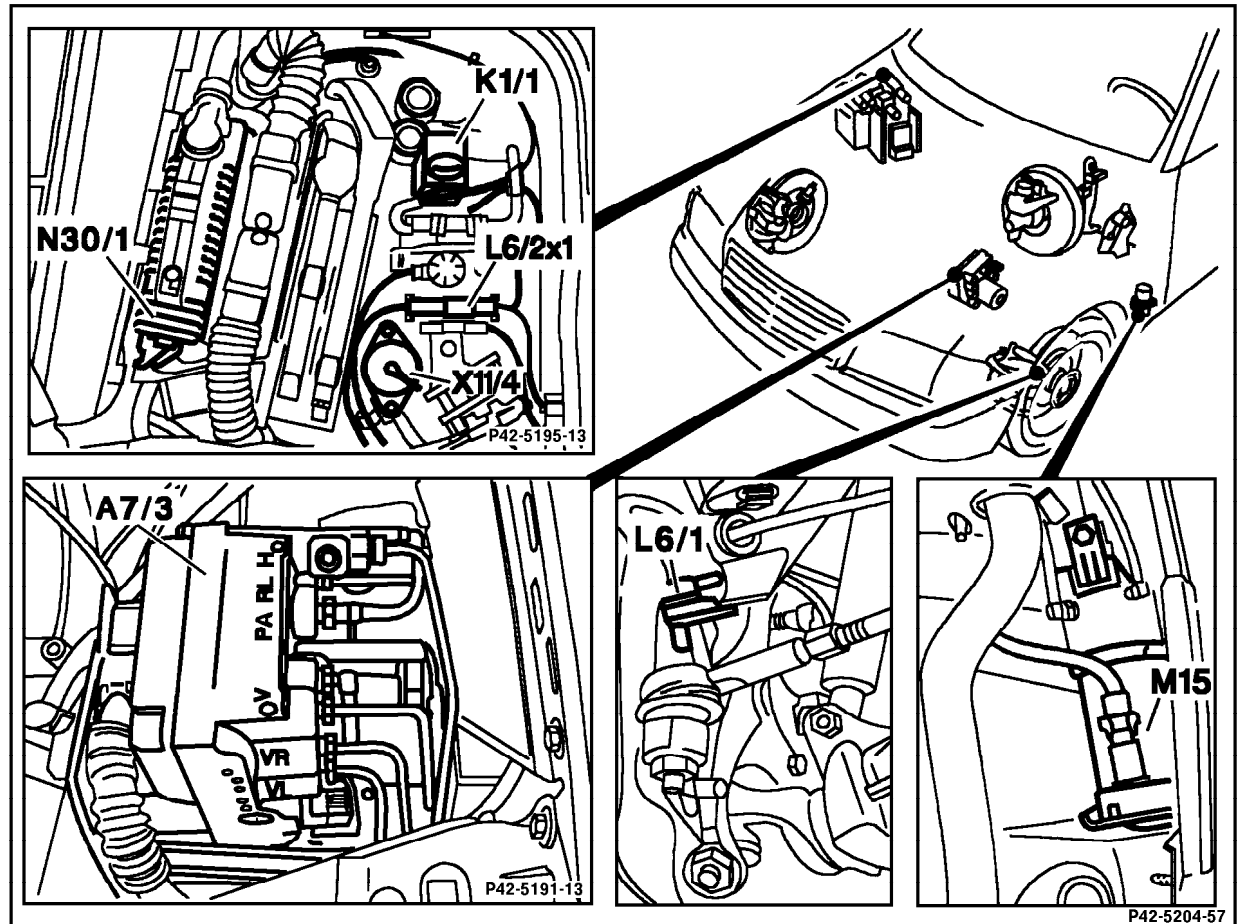


Figure 1

- A7/3 ABS/ASR hydraulic unit
- L6/1 Left front axle VSS sensor
- L6/2 Right front axle VSS sensor
- M15 ASR charging pump
- N30/1 ABS/ASR control module
- X11/4 Data link connector (DTC readout)

P42-5204-57

Electrical Test Program - Component Locations

Electrical Components on Rear Axle and in Passenger Compartment

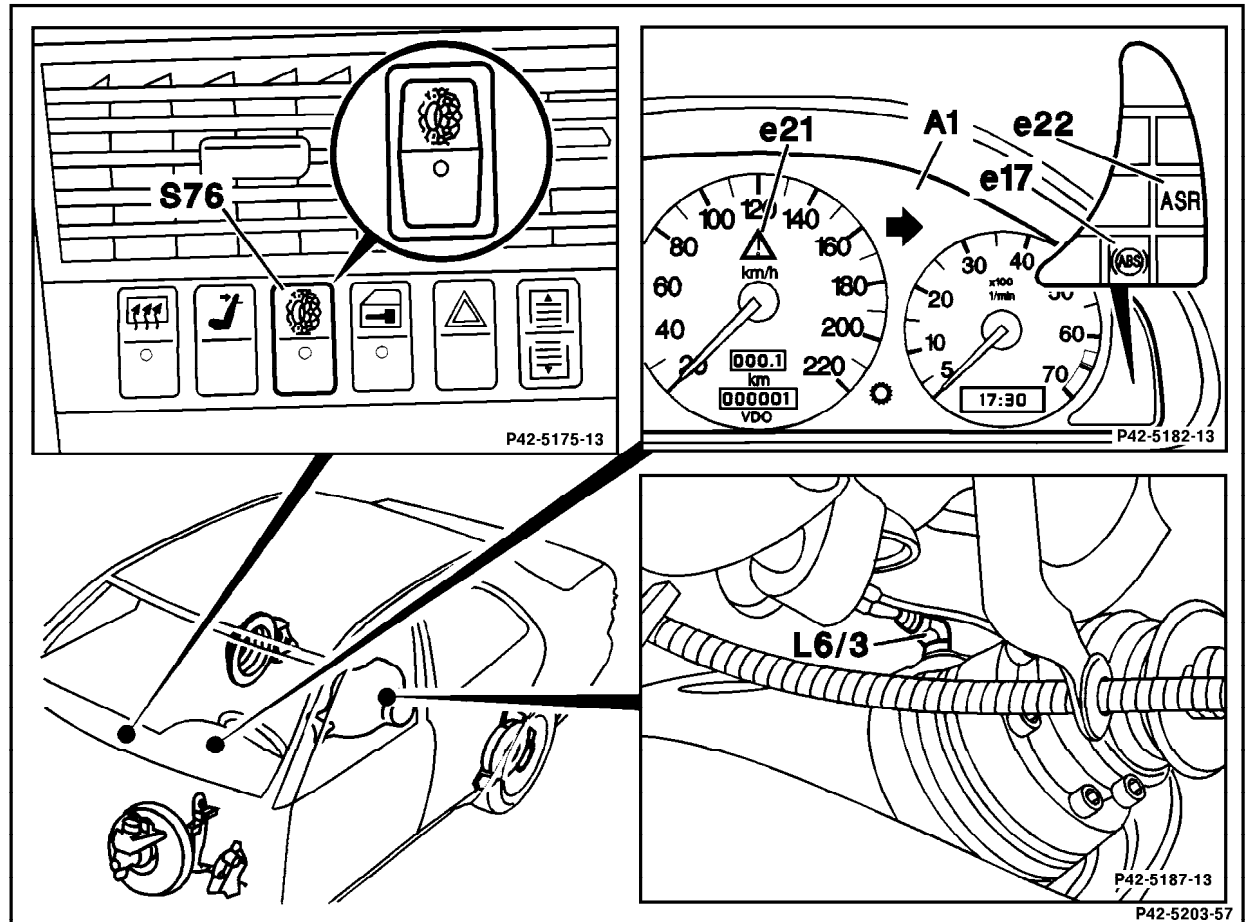


Figure 2

- A1 Instrument cluster
- A1e17 ABS MIL
- A1e21 ASR warning lamp
- A1e22 ASR MIL
- L6/3 Left rear axle VSS sensor
- L6/4 Right rear axle VSS sensor
- S76 ASR snow chain switch (with indicator)

P42-5203-57