

Diagnosis - Complaint Related Diagnostic Chart

Complaint/Problem	Possible cause	Remedy/Test step ¹⁾
ABS malfunction indicator lamp (MIL) (A1e17) remains lit with engine running.		DTC memory 11, DTC memory for base module, see Volume 1, section 1 11,
ABS malfunction indicator lamp (MIL) (A1e17) comes on and stays on while driving.		DTC memory 11
ABS malfunction indicator lamp (MIL) (A1e17) comes on and goes out while driving.	Voltage supply < 11 V, too many electrical consumers operating	Test generator (G2), DTC memory 11
ABS malfunction indicator lamp (MIL) (A1e17) does not come on with ignition ON .	Wiring ABS malfunction indicator lamp (MIL) (A1e17)	23 ⇒ 2.0

¹⁾ Observe Preparation for Test, see 22.