

## Diagnosis - Complaint Related Diagnostic Chart

Complaint/Problem	Possible cause	Remedy/Test step <sup>1)</sup>
ABS malfunction indicator lamp (MIL) (A1e17) comes on with engine running.		Read DTC memory: 11.
ABS malfunction indicator lamp (MIL) (A1e17) comes on and stays on while driving.		Read DTC memory: 11.
ABS malfunction indicator lamp (MIL) (A1e17) comes on and goes out while driving.	Voltage supply < 11 V, too many electrical consumers in use.	Test generator (G2), Read DTC memory: 11.
ABS malfunction indicator lamp (MIL) (A1e17) does not come on with ignition <b>ON</b> .	Wiring, ABS malfunction indicator lamp (MIL) (A1e17)	23 ⇒ 2.0

<sup>1)</sup> Observe Preparation for Test, see 22.