

Electrical Test Program - Component Locations

Figure 1


- A1e17 ABS MIL
- A7/3k1 ASR/ETS/ESP hydraulic unit, solenoid valve relay
- A7/3k2 ASR/ETS/ESP hydraulic unit, high-pressure/return pump relay
- A7/3m1 ASR/ETS/ESP hydraulic unit, high-pressure/return pump
- L6/1 Left front axle VSS sensor
- L6/2 Right front axle VSS sensor
- L6/3 Left rear axle VSS sensor
- L6/4 Right rear axle VSS sensor
- N16/1 Base module
- S9/1 Stop lamp switch
- X11/4 Data link connector

ASR only

- A1e21 ASR warning lamp
- A1e22 ASR MIL
- N47-1 ASR/SPS control module
- S12 Parking brake switch
- S76/5 ASR OFF switch
- Y61 Master brake cylinder switchover valve (Models 129.076, 140.04/05/07)

ETS only

- A1e35 ETS MIL
- A1e36 ETS warning lamp
- N47-2 ETS/SPS control module

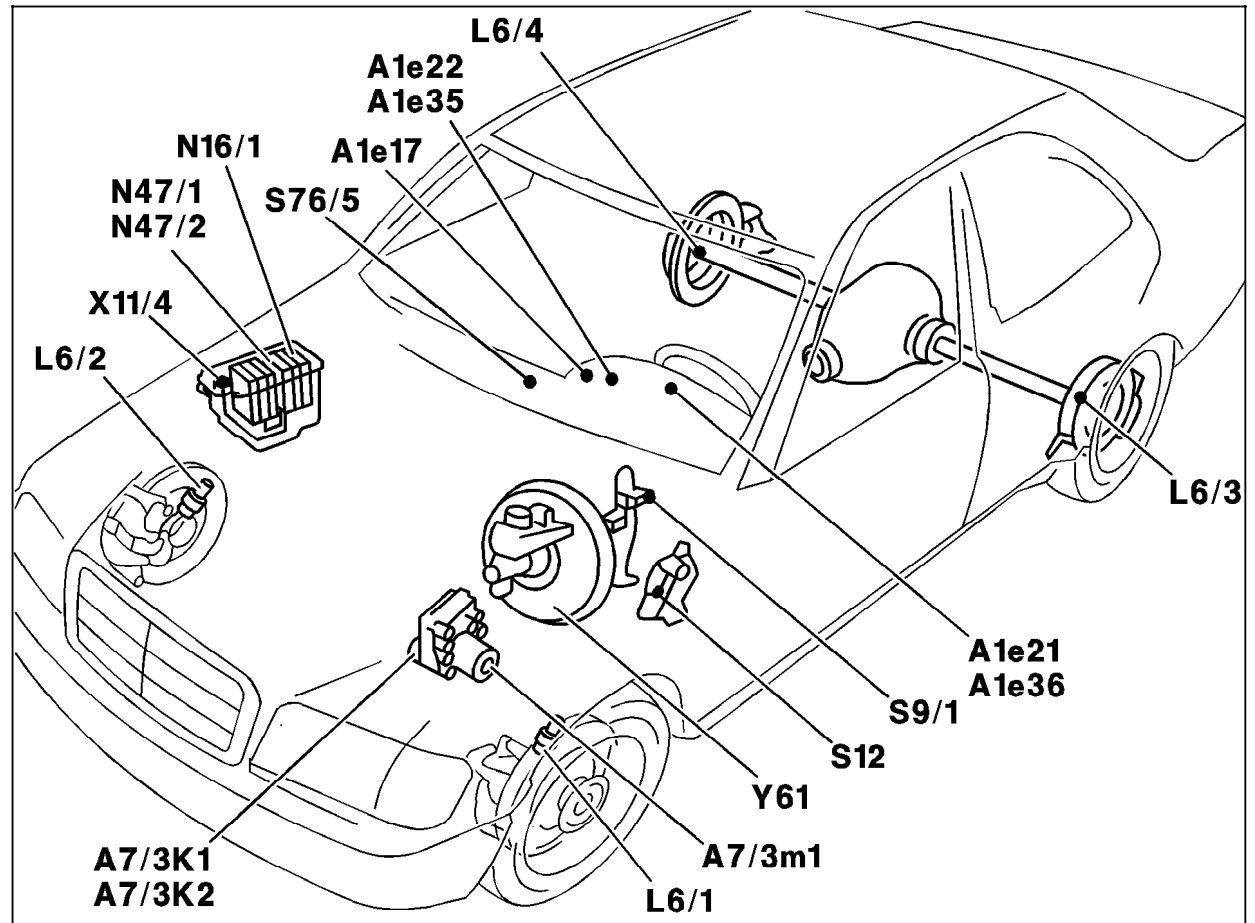

P42-5312-57