

9.2 Traction Systems (ASR, ETS)

Electrical Test Program - Component Locations

Model 202

Figure 1


A1e17 ABS MIL
A7/3k1 ETS/ASR hydraulic unit, solenoid valve relay
A7/3k2 ETS/ASR hydraulic unit, high-pressure/return pump relay
A7/3m1 ETS/ASR hydraulic unit, high-pressure/return pump
K1 Overvoltage protection relay
L6/1 Left front axle VSS sensor
L6/2 Right front axle VSS sensor
L6/3 Left rear axle VSS sensor
L6/4 Right rear axle VSS sensor
S9/1 Stop lamp switch (4 pole)
X11/4 Data link connector

ASR only

A1e21 ASR warning lamp
A1e22 ASR MIL
N47-1 ASR/SPS control module
S12 Parking brake switch
S76/5 ASR Off switch

ETS only

A1e35 ETS MIL
A1e36 ETS warning lamp
N47-2 ETS/SPS control module

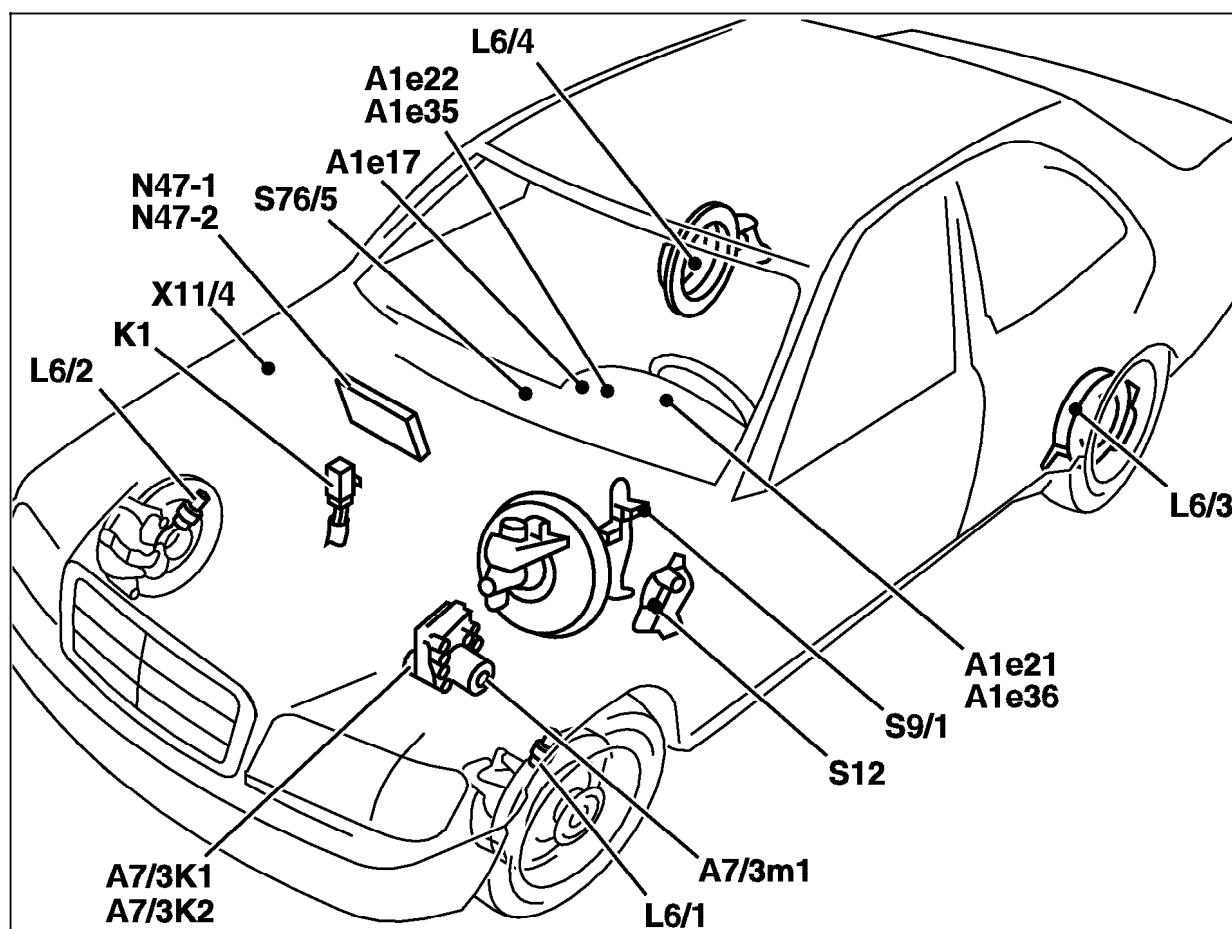

P42.40-0264-57

9.2 Traction Systems (ASR, ETS)

Electrical Test Program - Component Locations

Model 210

Figure 1


A1e17 ABS MIL
A7/3 ETS/ASR hydraulic unit,
K40 Relay module (Base function)
L6/1 Left front axle VSS sensor
L6/2 Right front axle VSS sensor
L6/3 Left rear axle VSS sensor
L6/4 Right rear axle VSS sensor
S9/1 Stop lamp switch (4 pole)
S12 Parking brake switch
X11/4 Data link connector

ASR only

A1e21 ASR warning lamp
A1e22 ASR MIL
N47-1 ASR/SPS control module
S76/5 ASR OFFswitch

ETS only

A1e35 ETS MIL
A1e36 ETS warning lamp
N47-2 ETS/SPS control module

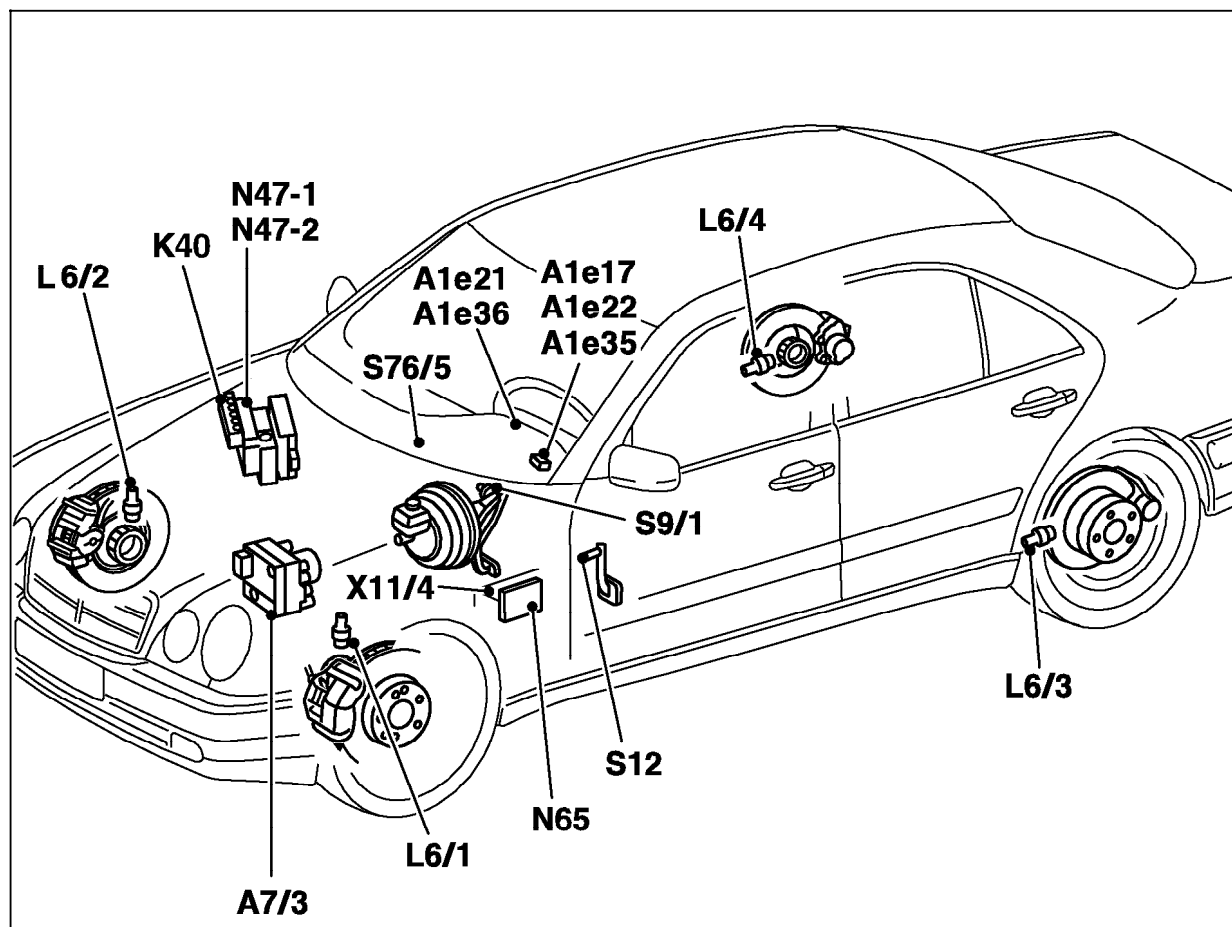

P42.40-0285-57