

## 9.4 Traction Systems (ETS) (4MATIC) and SPS

### Electrical Test Program – ETS Component Locations

#### Model 210

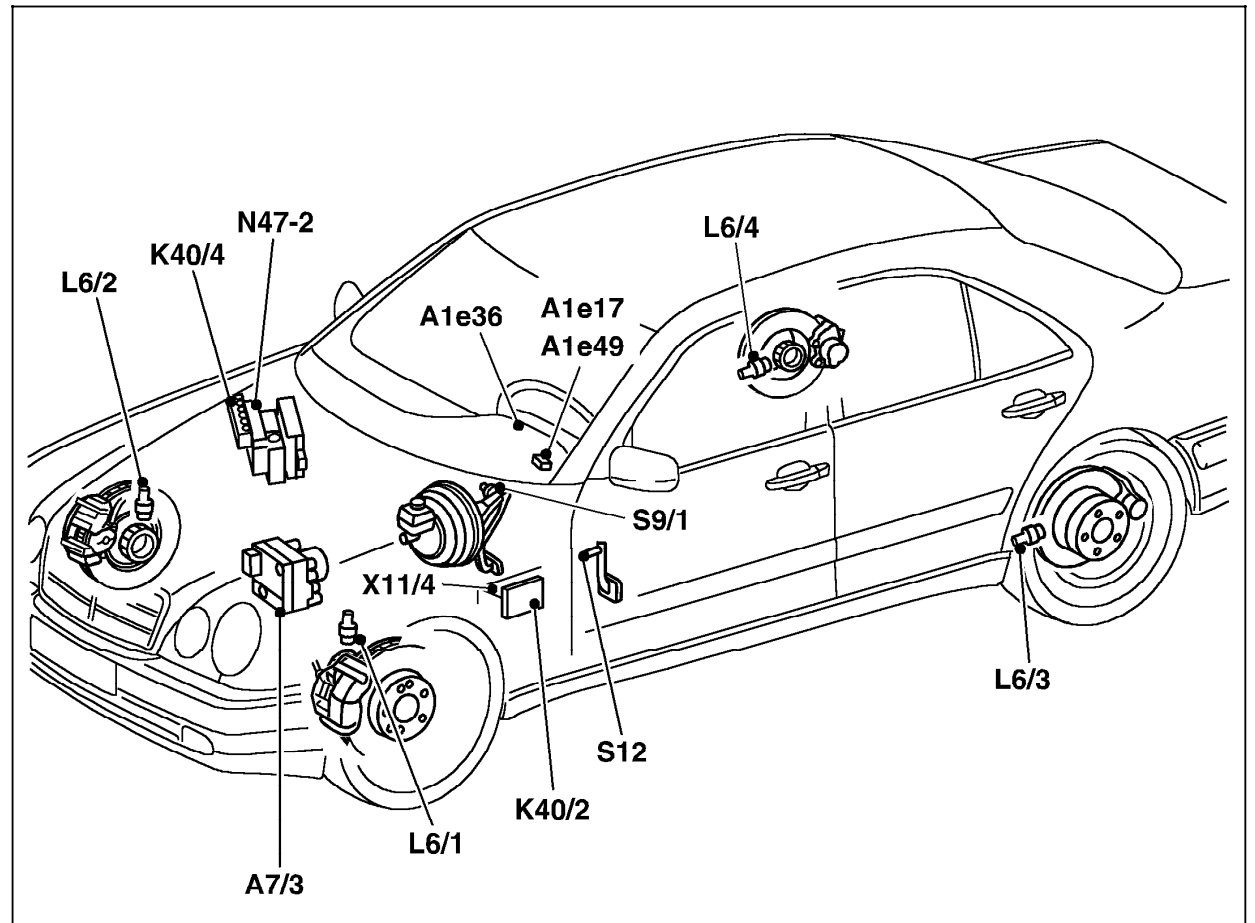


Figure 1

- A1e17 ABS MIL
- A1e49 BAS/ETS MIL
- A1e36 ETS warning lamp
- A7/3 ASR/ETS/ESP hydraulic unit
- K40/2 Driver-side fuse and relay module box
- K40/4 Passenger-side fuse and relay module box
- L6/1 Left front axle VSS sensor
- L6/2 Left front axle VSS sensor
- L6/3 Left rear axle VSS sensor
- L6/4 Right rear axle VSS sensor
- N47-2 ETS/SPS control module
- S9/1 Stop lamp switch (4-pole)
- S12 Parking brake switch
- X11/4 Data link connector (DTC readout)

P42.35-0218-06