

9.5 Traction Systems (ETS)

Electrical Test Program – ETS Component Locations

Model 163

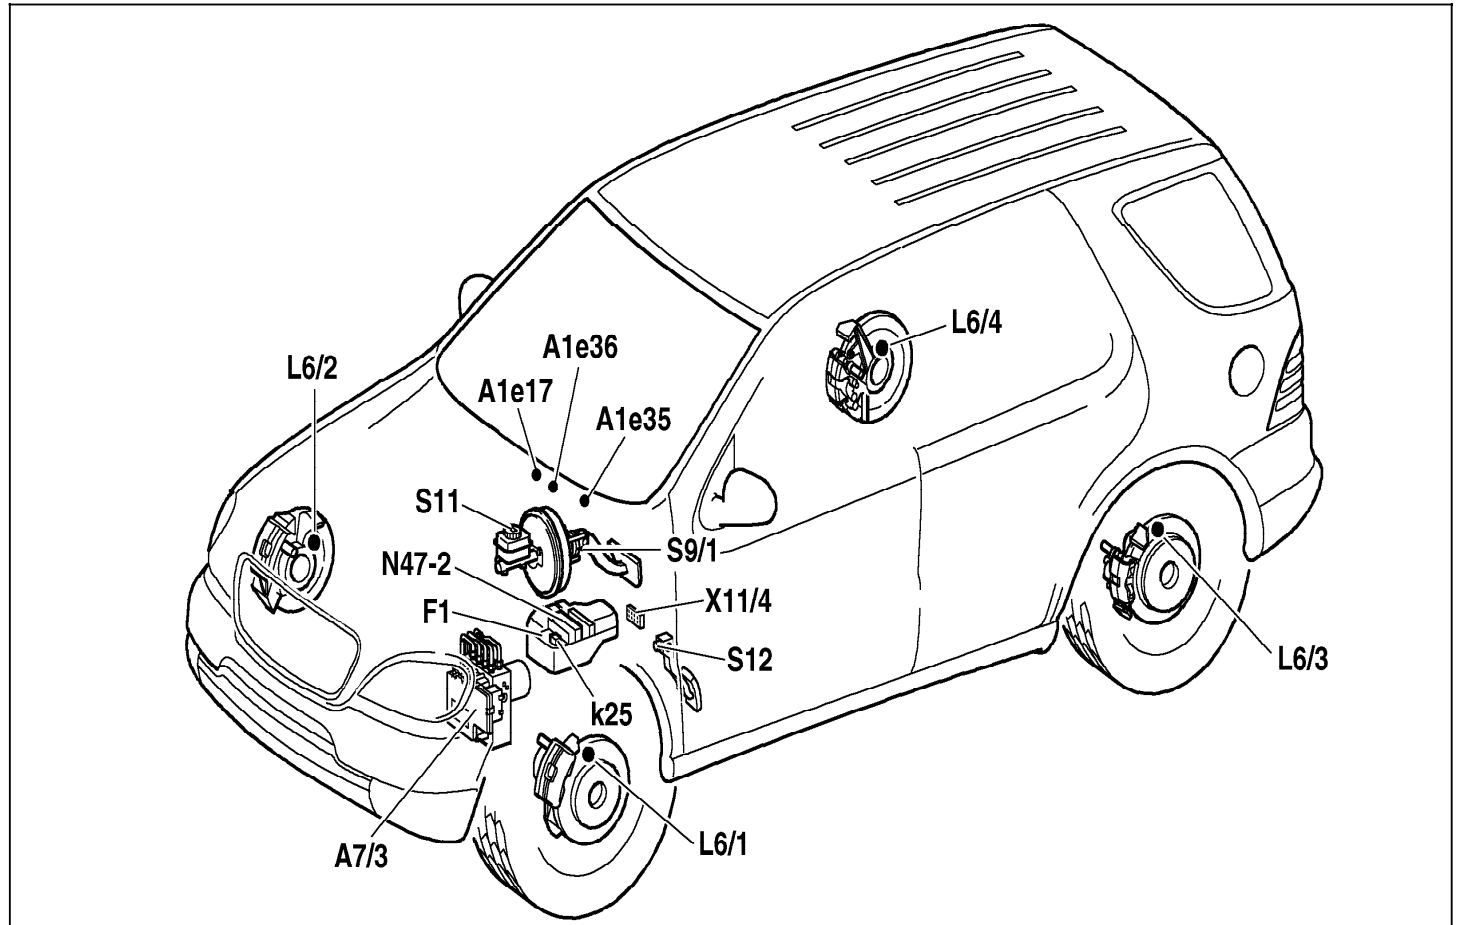


Figure 1

- A1e17 ABS MIL
- A1e35 ETS MIL
- A1e36 ETS warning lamp
- A7/3 ASR/ETS/ESP hydraulic unit
- F1 Fuse and relay box
- k25 High pressure/return pump relay
- L6/1 Left front axle VSS sensor
- L6/2 Right front axle VSS sensor
- L6/3 Left rear axle VSS sensor
- L6/4 Right rear axle VSS sensor
- N47-2 ETS/SPS control module
- S9/1 Stop lamp switch (4-pole)
- S11 Brake fluid level switch
- S12 Parking brake switch
- X11/4 Data link connector (DTC read out)

P42.35-0237-09