


## Electrical Test Program – Component Locations

Engine 104

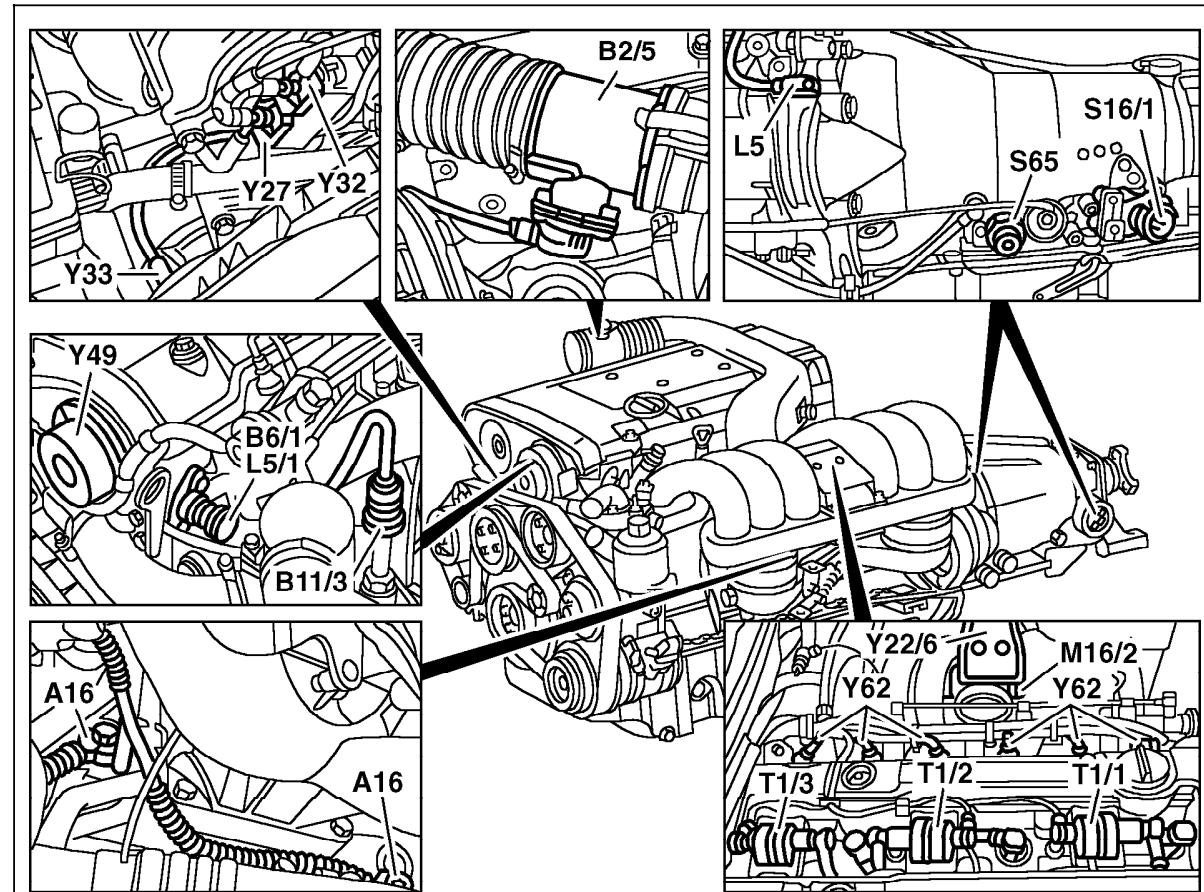

U07.51-0340-57

### Electrical Test Program – Component Locations

Engine Compartment  
Model 124

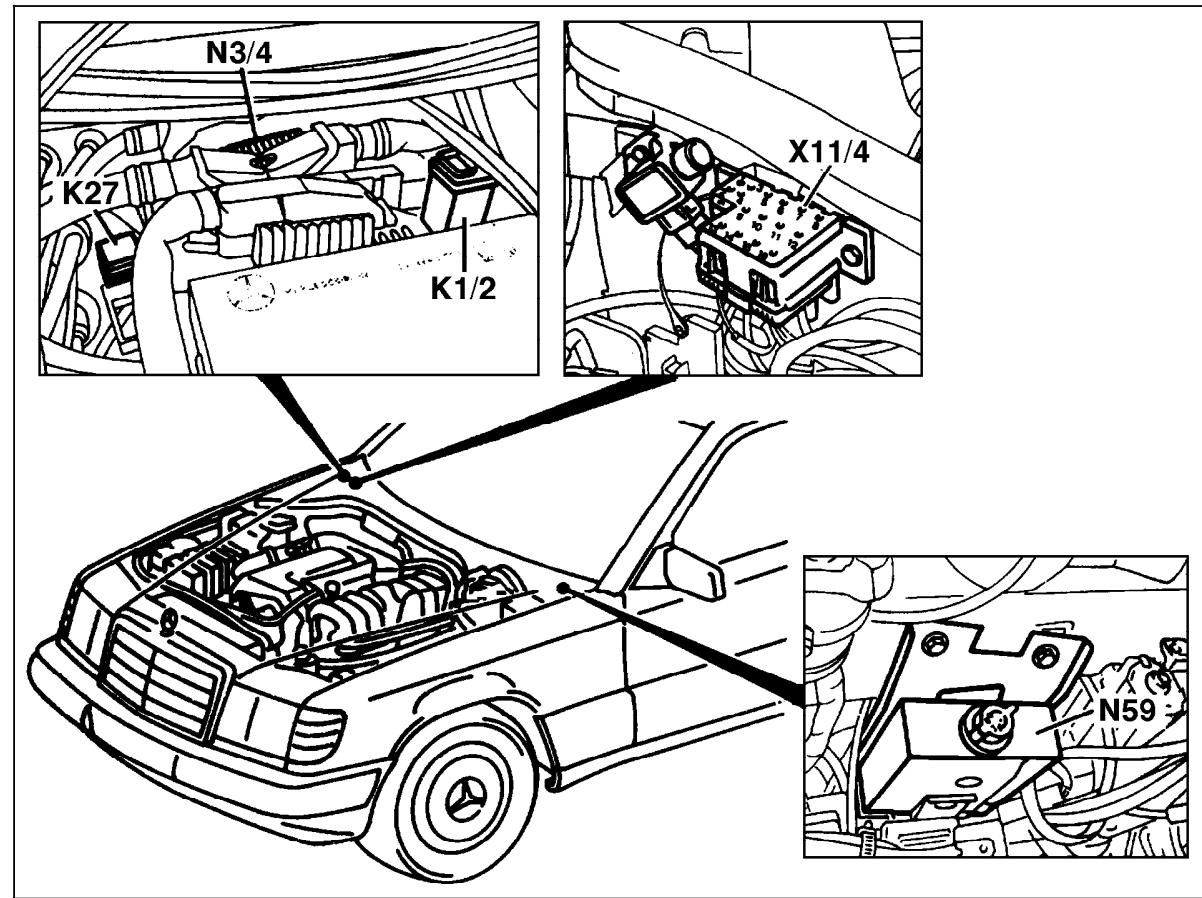


Figure 2

- K1/2 Overvoltage protection relay module
- K27 FP relay module
- N3/4 Engine control module (HFM-SFI)
- N59 Diagnostic module (OBD I) (California)
- X11/4 Data link connector (DTC readout)

U07-5923-57

## Electrical Test Program – Component Locations

Engine Compartment  
Model 124

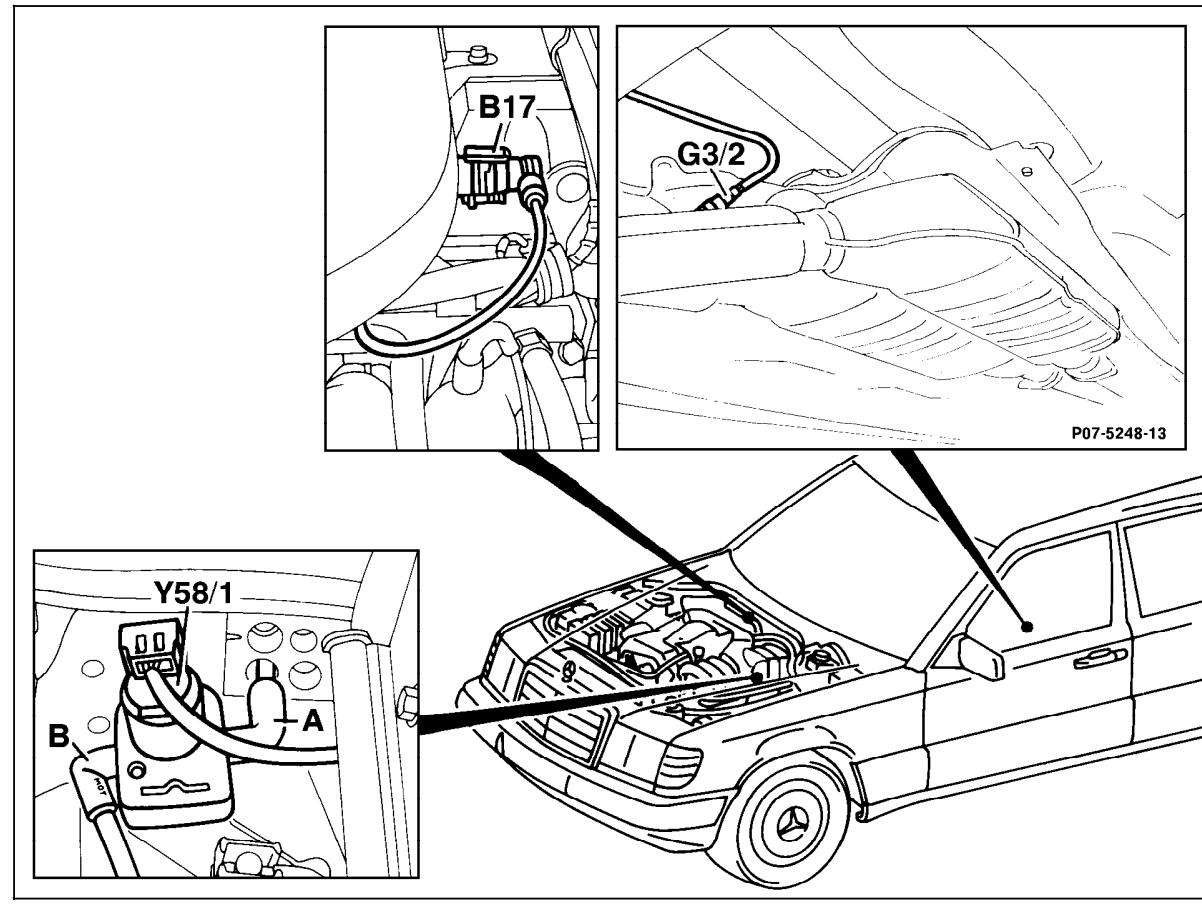


Figure 3

- B17 IAT sensor  
G3/2 O2S 1 (before TWC)  
Y58/1 Purge control valve  
A Purge line from charcoal canister  
B Purge line to engine

U07-5922-57

## Electrical Test Program – Component Locations

Engine Compartment  
Model 124

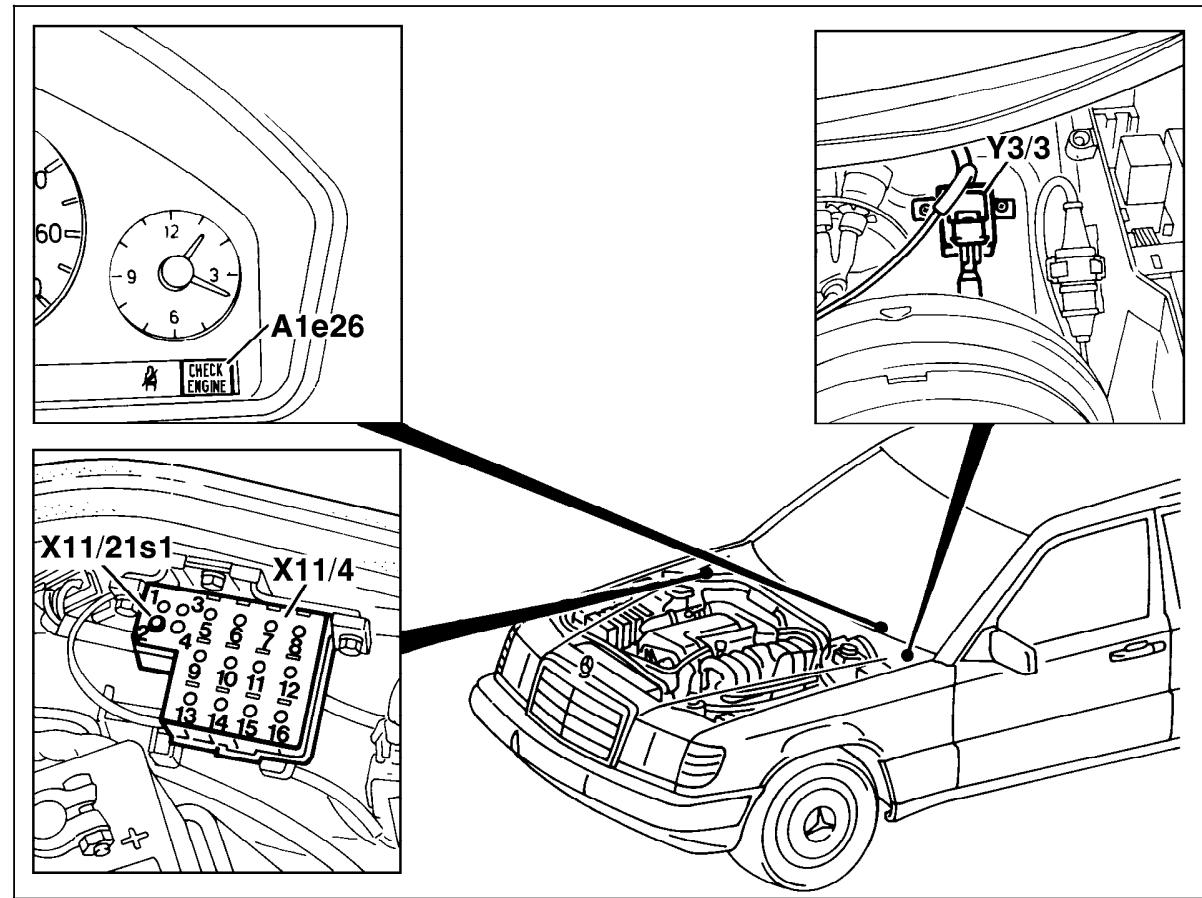


Figure 4

- A1e26 "CHECK ENGINE" MIL  
Y3/3 Upshift delay switchover valve  
X11/4 Data link connector (DTC readout)  
X11/21s1 Pushbutton (with LED) (USA - California)

U07-5924-57

## Electrical Test Program – Component Locations

Engine Compartment  
Model 129

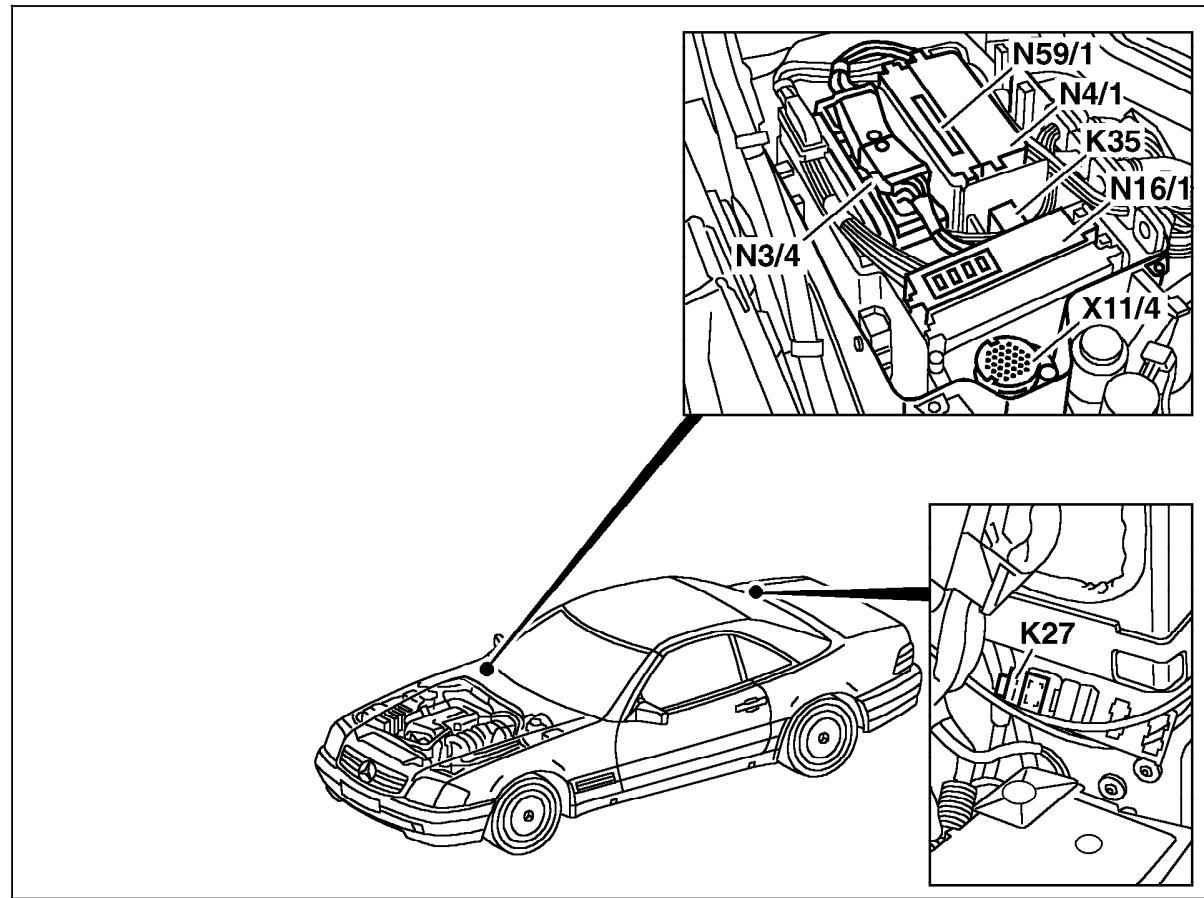


Figure 5

- |       |   |
|-------|---|
| K27   | FP relay module                                     |
| N3/4  | Engine control module (HFM-SFI)                     |
| N4/1  | EA/CC/ISC control module                            |
| N4/3  | CC/ISC control module                               |
| N16/1 | Base module   |
| N59/1 | Diagnostic module (OBD II)                          |
| K35   | O2S 2 (after TWC) heater relay module (as of 06/95) |
| X11/4 | Data link connector (DTC readout)                   |

U07.61-0262-57

## Electrical Test Program – Component Locations

Engine Compartment  
Model 129

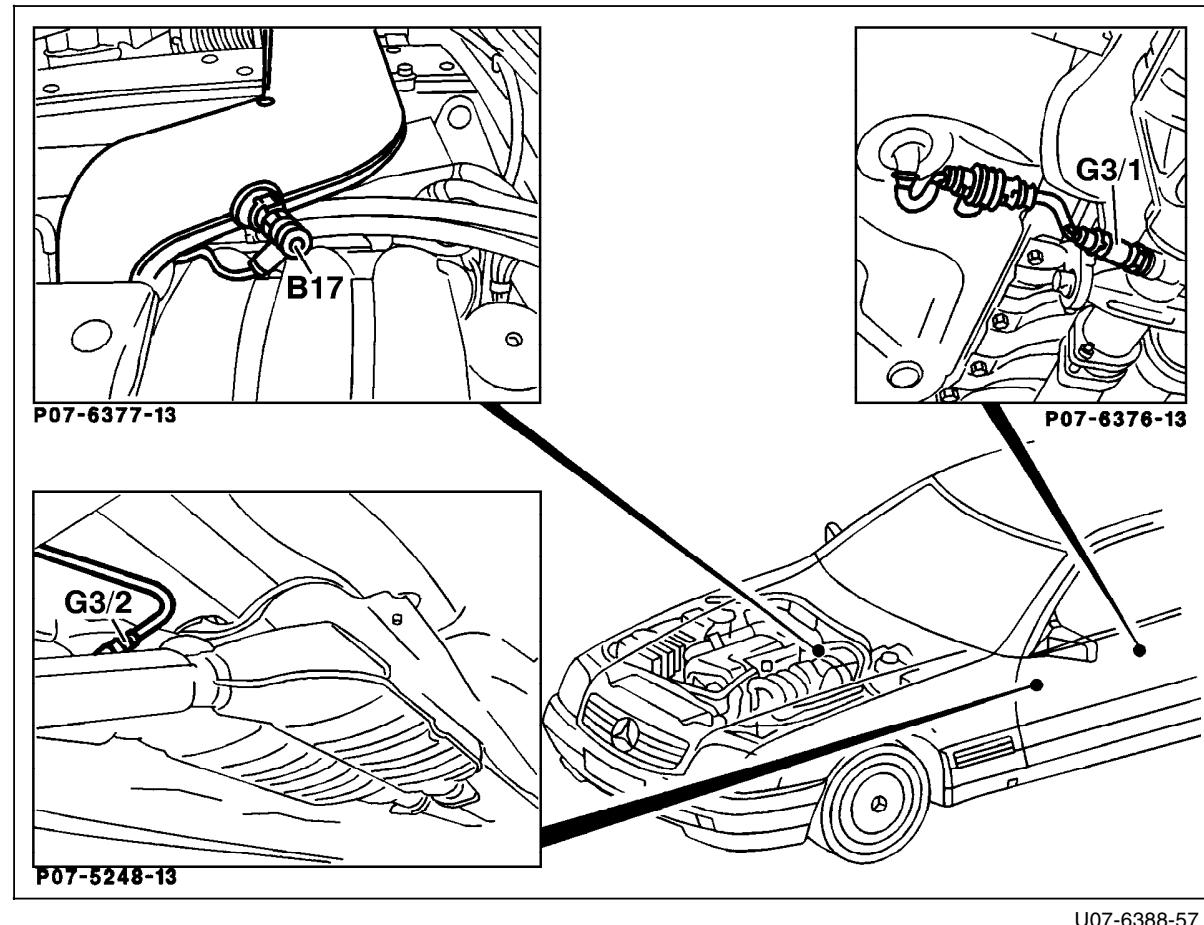


Figure 6

B17      IAT sensor  
G3/1    O2S 2 (after TWC)  
G3/2    O2S 1 (before TWC)

U07-6388-57

## Electrical Test Program – Component Locations

Engine Compartment  
Model 129

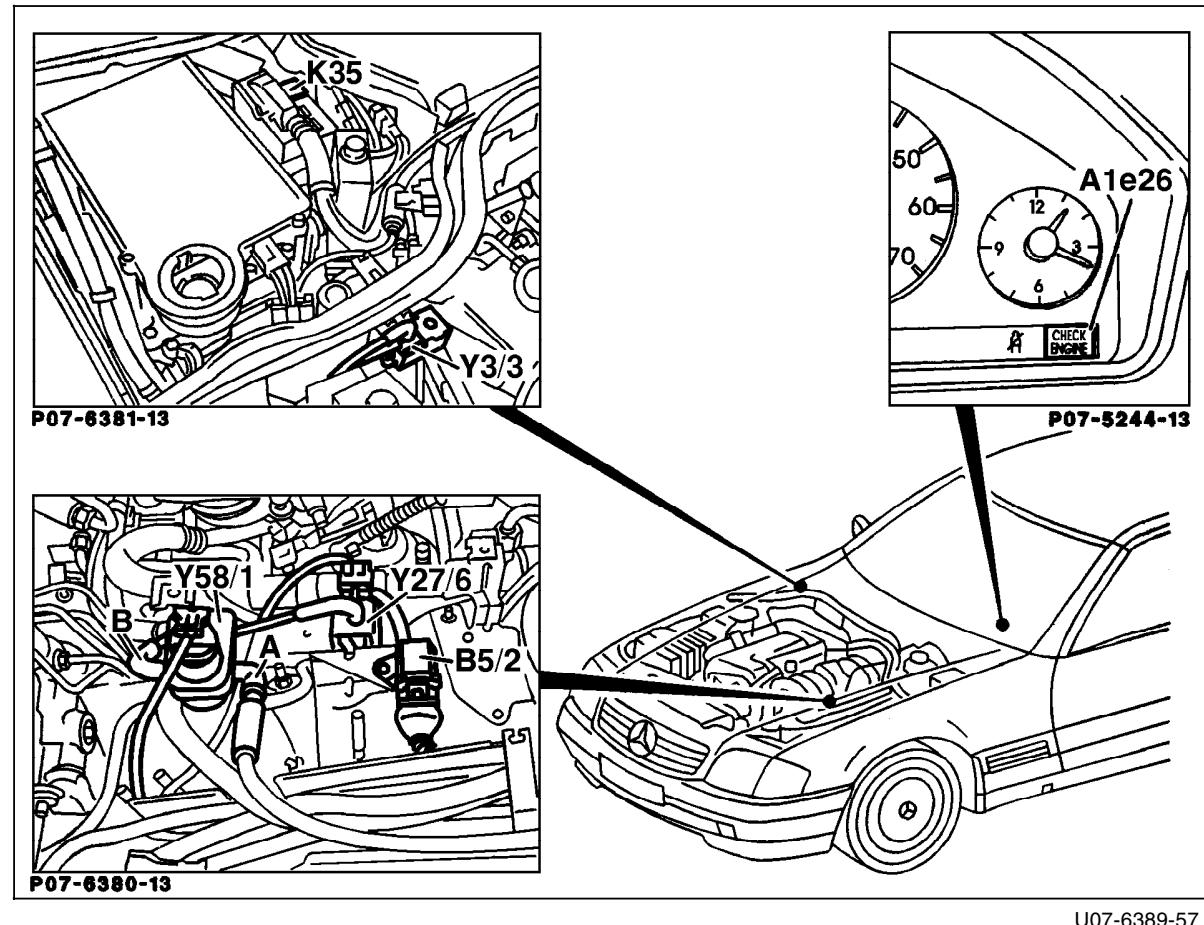


Figure 7

- A1e26 "CHECK ENGINE" MIL
- B5/2 DM pressure sensor (HFM-SFI)
- K35 O2S 2 (after TWC) heater relay module (up to 05/95)
- Y3/3 Upshift delay switchover valve
- Y27/6 Purge flow switchover valve
- Y58/1 Purge control valve
- A Purge line from charcoal canister
- B Purge line to engine

U07-6389-57

## Electrical Test Program – Component Locations

Engine Compartment  
Model 140

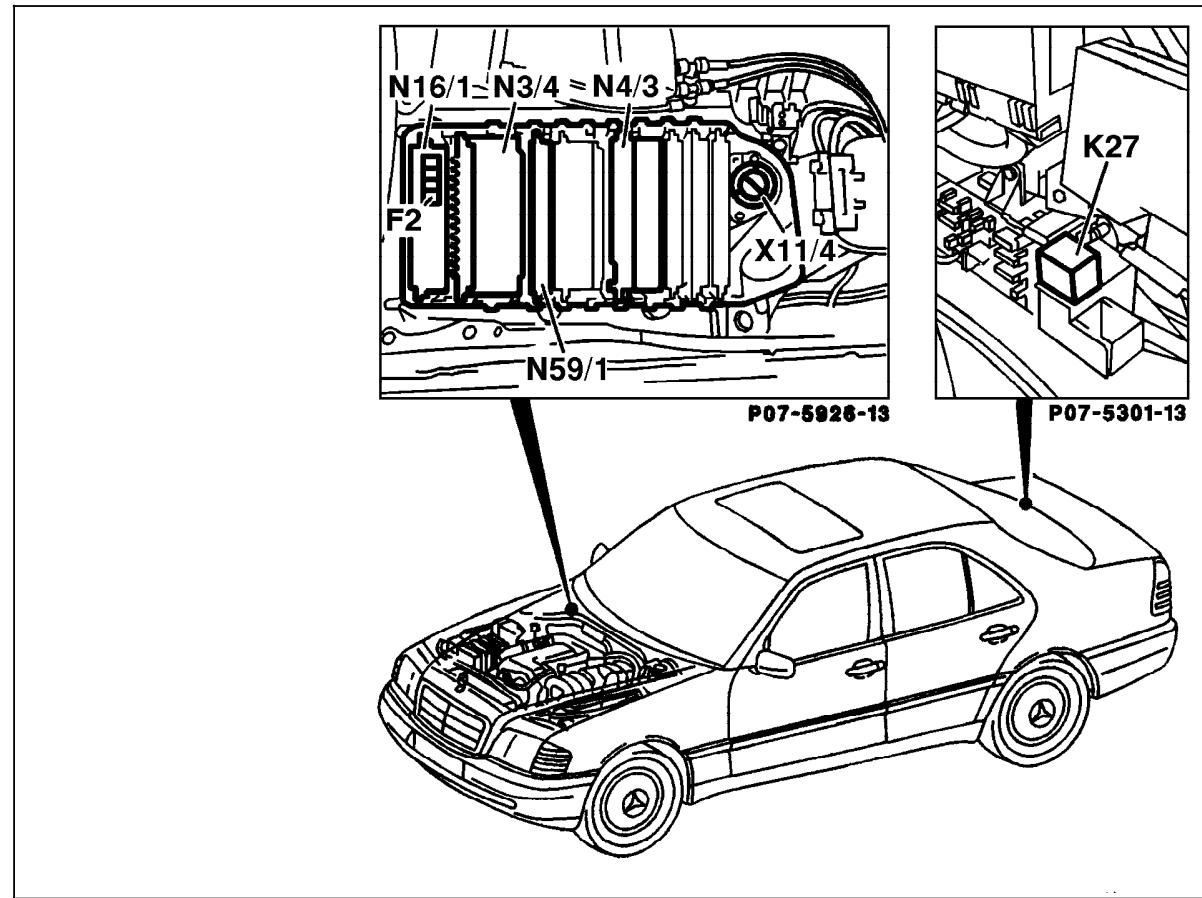


Figure 8

- K27 FP relay module  
N3/4 Engine control module (HFM-SFI)  
N16/1 Base module  
N59/1 Diagnostic module (OBD II)  
X11/4 Data link connector (DTC readout)

## Electrical Test Program – Component Locations

Engine Compartment  
Model 140

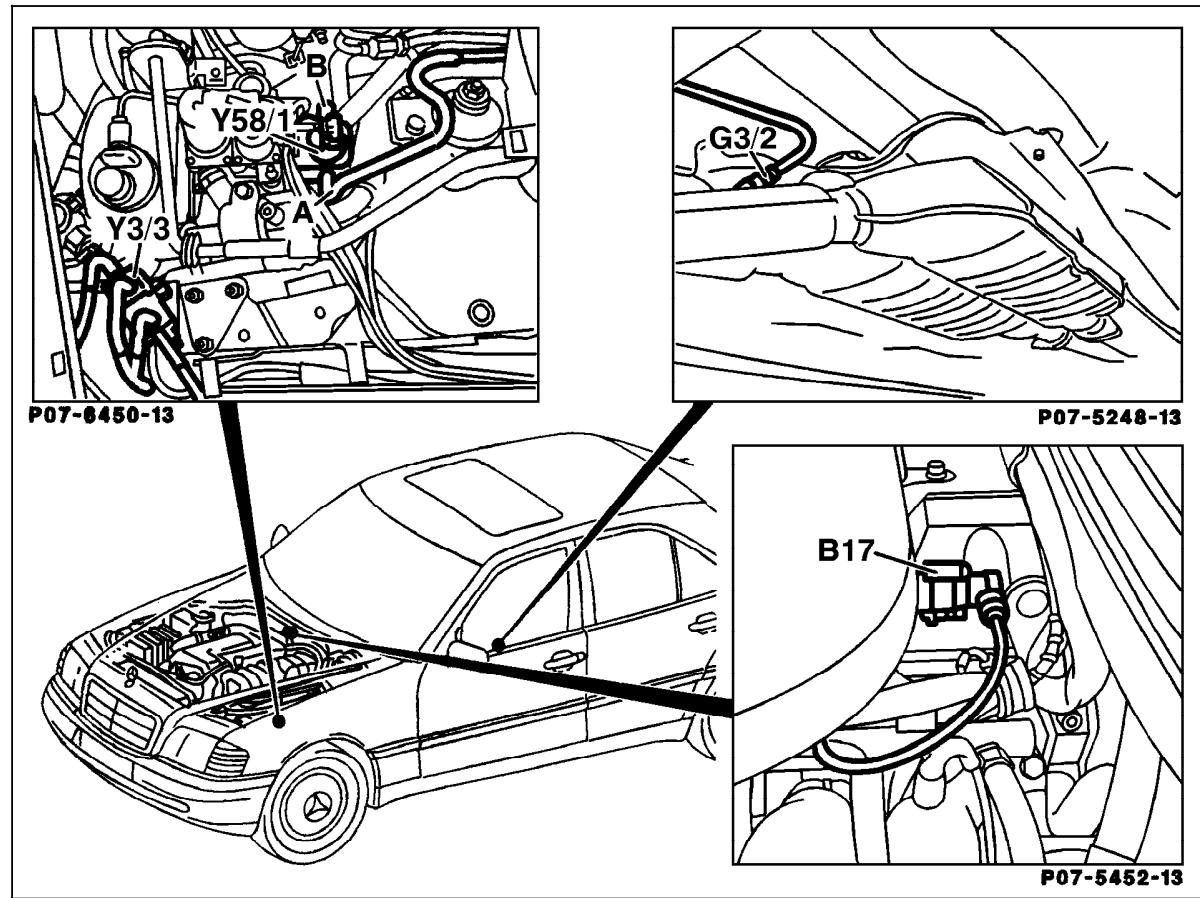


Figure 9

- B17 IAT sensor  
G3/2 O2S 1 (before TWC)  
Y3/3 Upshift delay switchover valve  
Y58/1 Purge control valve  
A Purge line from charcoal canister  
B Purge line to engine

### Electrical Test Program – Component Locations

Engine Compartment  
Model 140

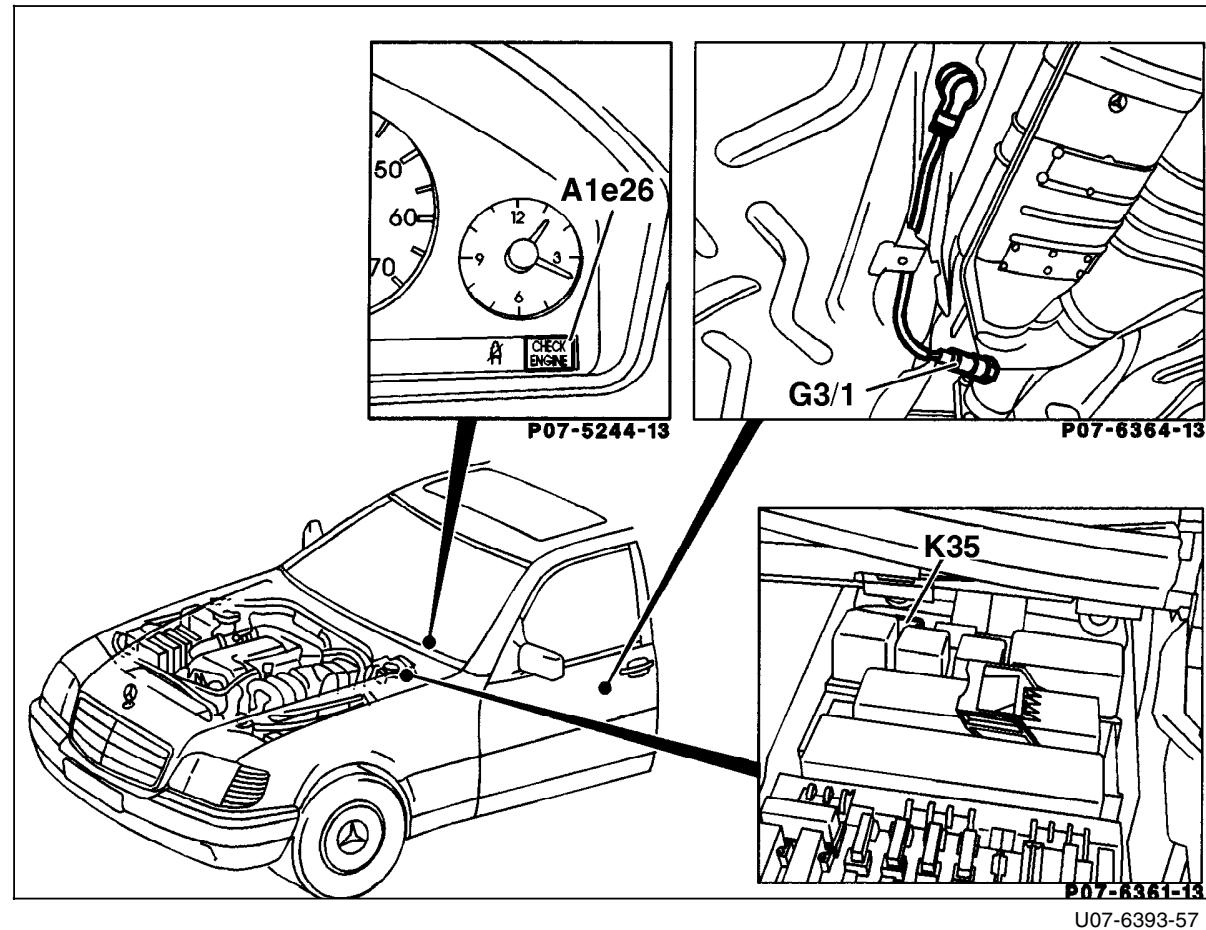


Figure 10

A1e26 "CHECK ENGINE" MIL  
G3/1 O2S 2 (after TWC)  
K35 O2S 2 (after TWC) heater relay module

### Electrical Test Program – Component Locations

Engine Compartment  
Model 202

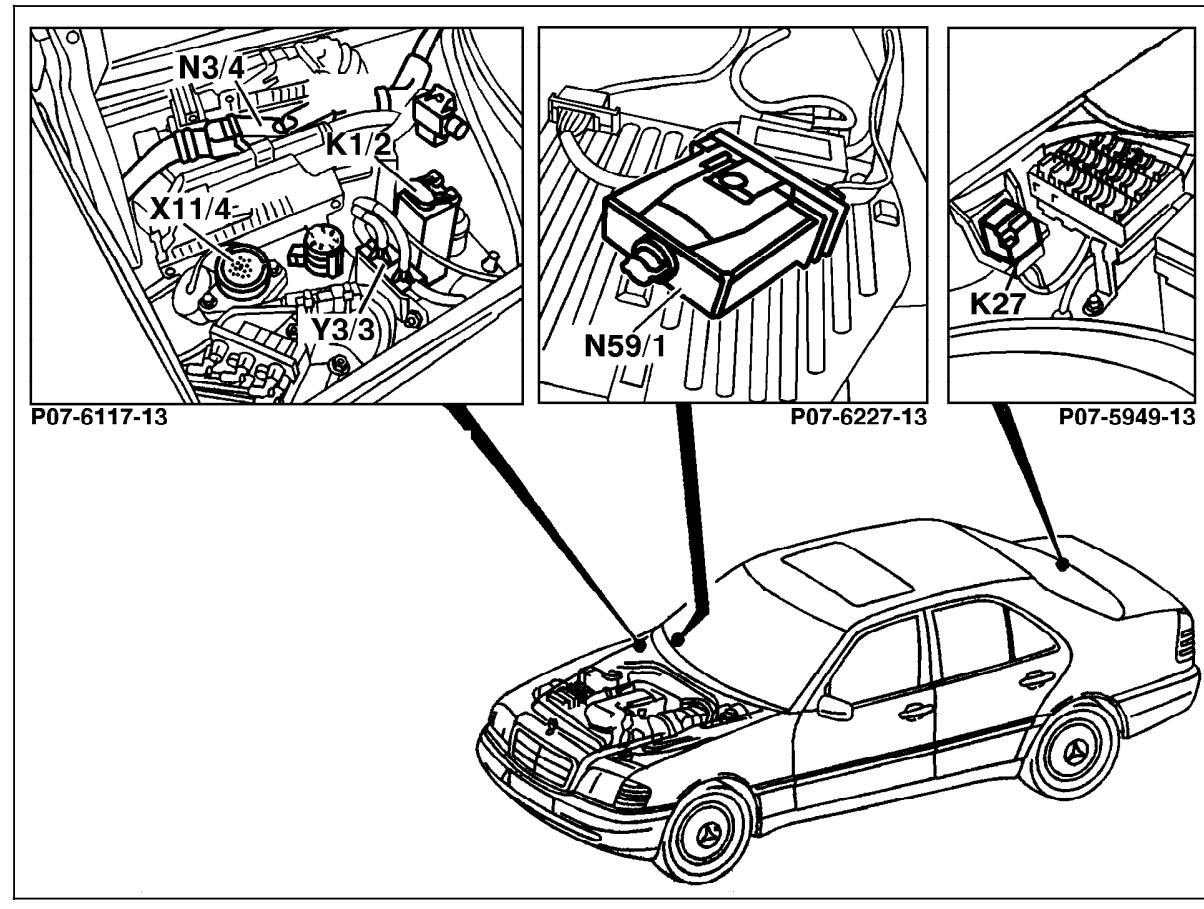


Figure 11

- K1/2 Overvoltage protection relay module (87E/87L/30a, 9-pole)
- K27 FP relay module
- N3/4 Engine control module (HFM-SFI)
- N59/1 Diagnostic module (OBD II)
- X11/4 Data link connector (DTC readout)
- Y3/3 Upshift delay switchover valve

U07-6285-57

## Electrical Test Program – Component Locations

Engine Compartment  
Model 202

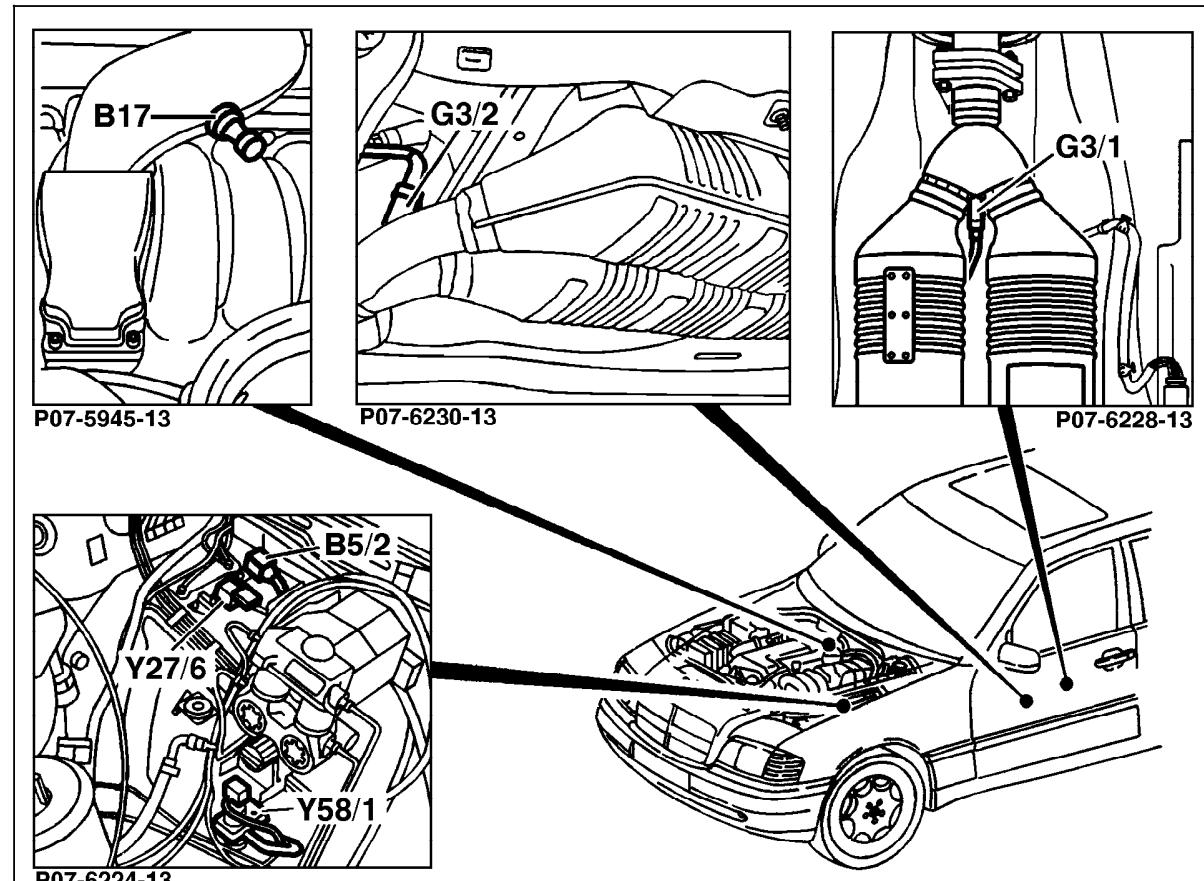


Figure 12

- B5/2 DM pressure sensor (HFM-SFI)
- B17 IAT sensor
- G3/1 O2S 2 (after TWC)
- G3/2 O2S 1 (before TWC)
- Y27/6 Purge flow switchover valve
- Y58/1 Purge control valve

U07-6286-57

### Electrical Test Program – Component Locations

Engine Compartment  
Model 202

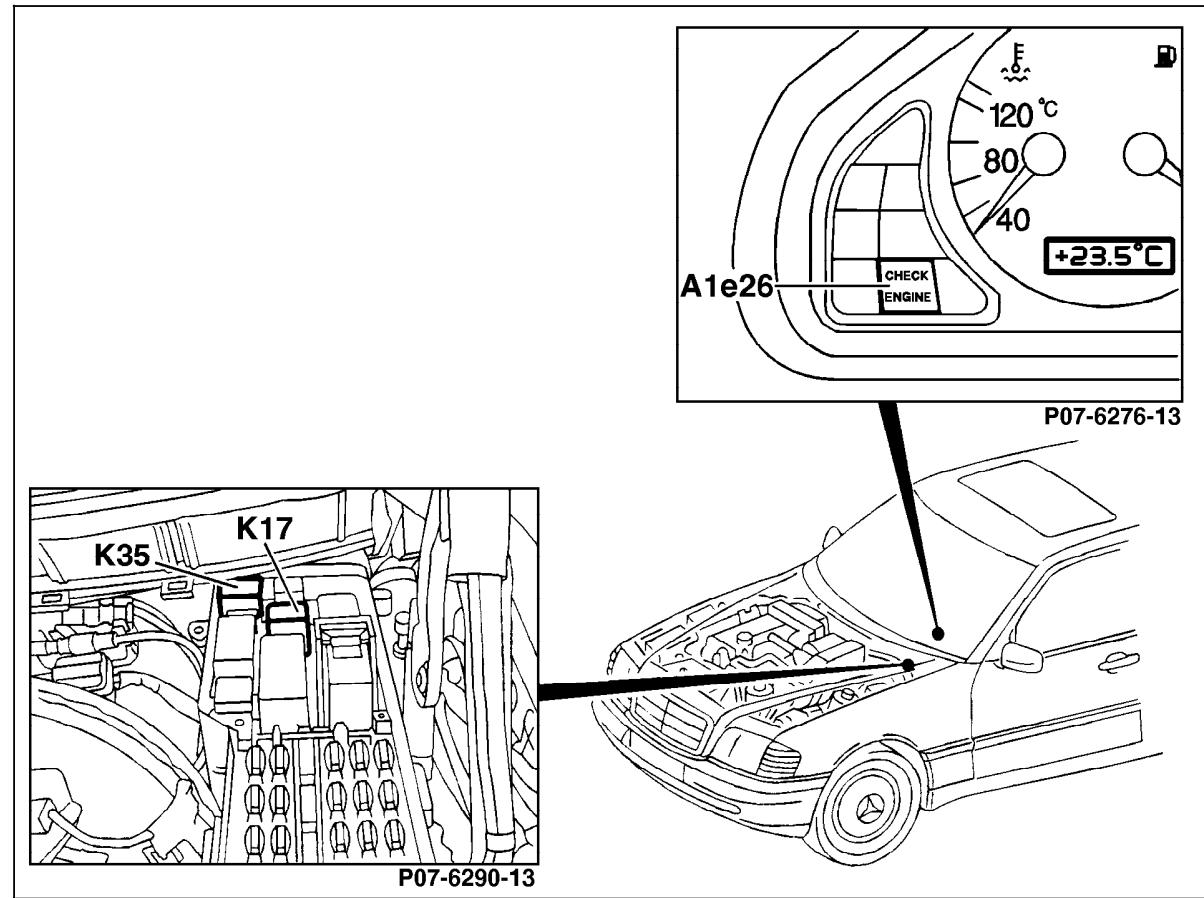


Figure 13

- A1e26 "CHECK ENGINE" MIL
- K17 AIR relay module
- K35 O2S 2 (after TWC) heater relay module

### Electrical Test Program – Component Locations

Engine Compartment  
Model 210

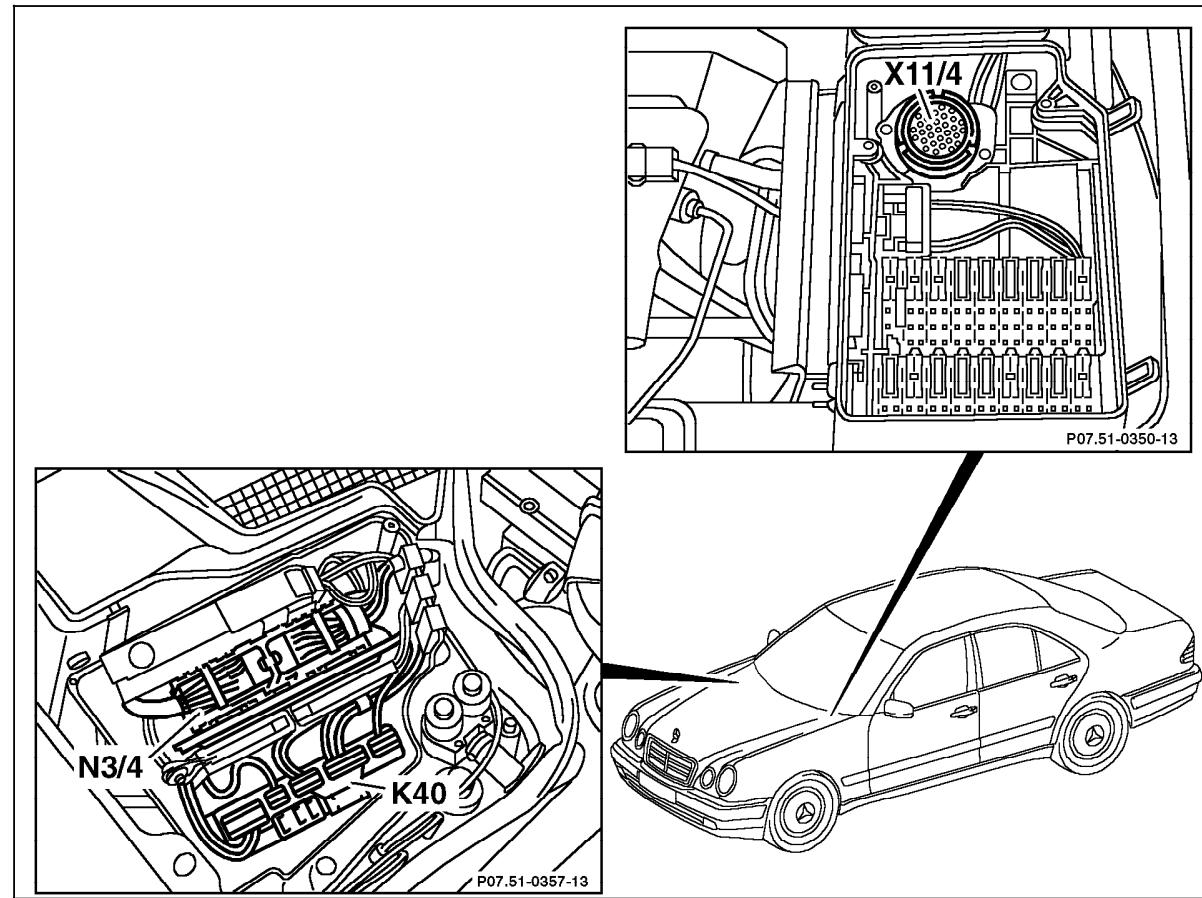


Figure 14

- K40 Relay module
- N3/4 Engine control module (HFM-SFI)
- X11/4 Data link connector (DTC readout)

U07.51-0353-57

### Electrical Test Program – Component Locations

Engine Compartment  
Model 210

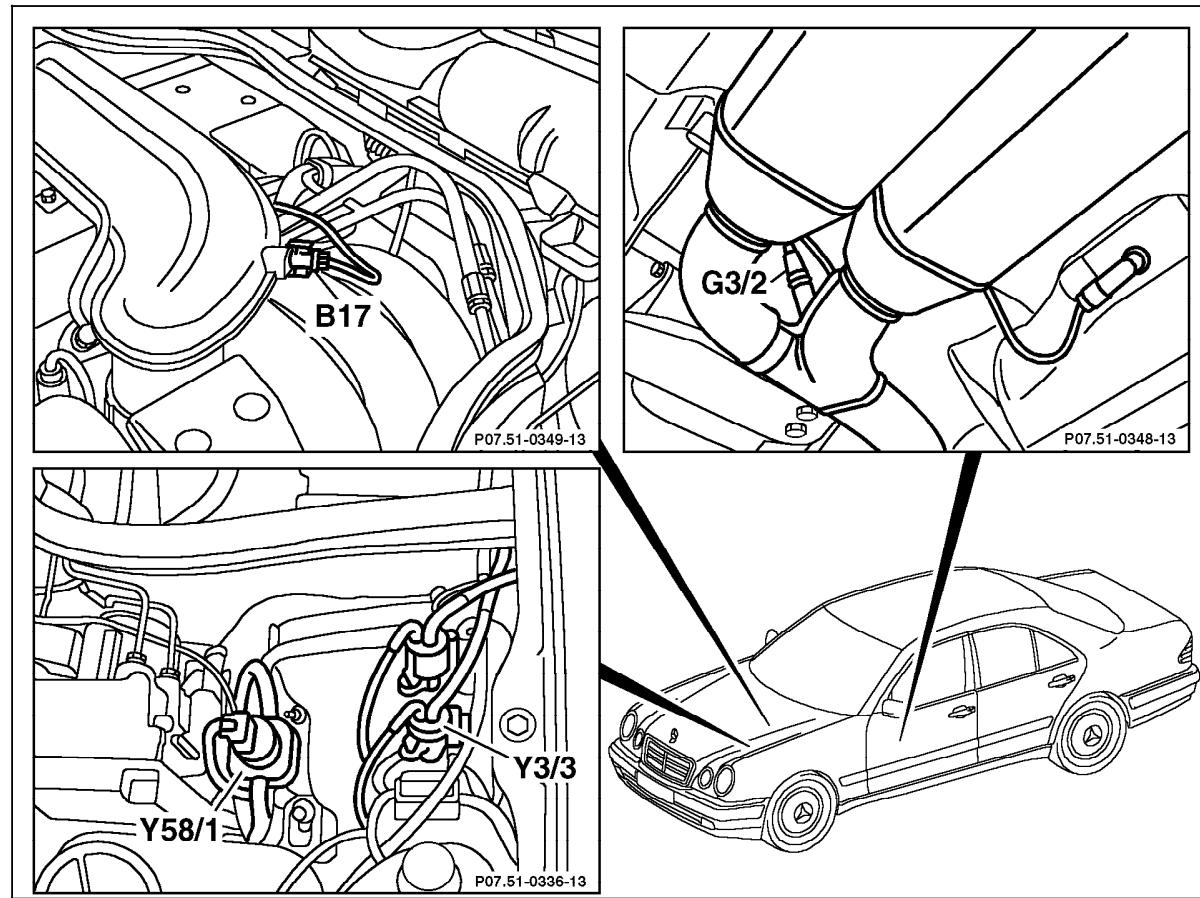


Figure 15

- B17 IAT sensor
- G3/2 O2S 1 (before TWC)
- Y3/3 Upshift delay switchover valve
- Y58/1 Purge control valve

U07.51-0354-57