
## Hydraulic Test Program - Preparation for Test (Fuel System Pressure and Internal Leakage Test)

- Connect pressure gauge to test connection
- After completing test, using measurement glass (055), release fuel pressure and allow residual fuel to drain into glass (see Figures 1).

## **Special Tools**

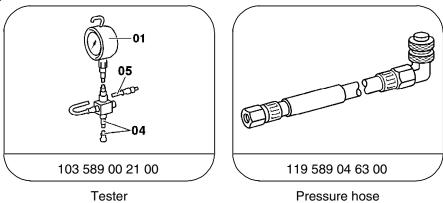

Diagnostic Manual • Engines • 09/00 3.2 LH-SFI 31/1

## Hydraulic Test Program - Preparation for Test (Fuel System Pressure and Internal Leakage Test)

Connection Diagram Engine 120

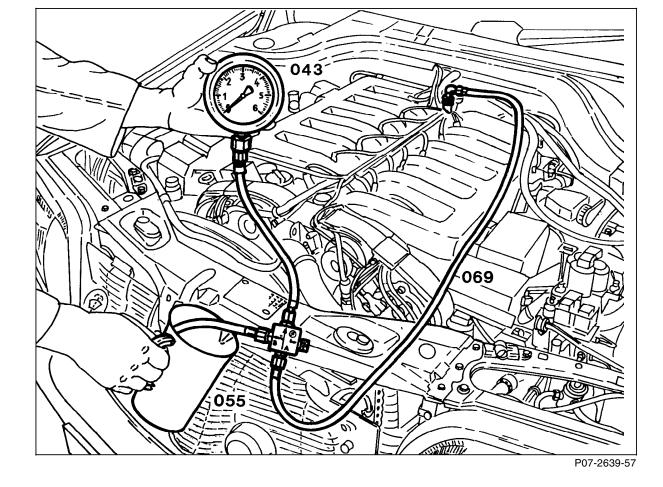


Figure 2

043 Pressure gauge (103 589 00 21 00)

055 Measurement glass

069 Pressure hose (119 589 04 63 00)

Diagnostic Manual • Engines • 09/00