


Electrical Test Program - Component Locations

Engine Compartment,
Model 140 with Engine 120 LH-SFI

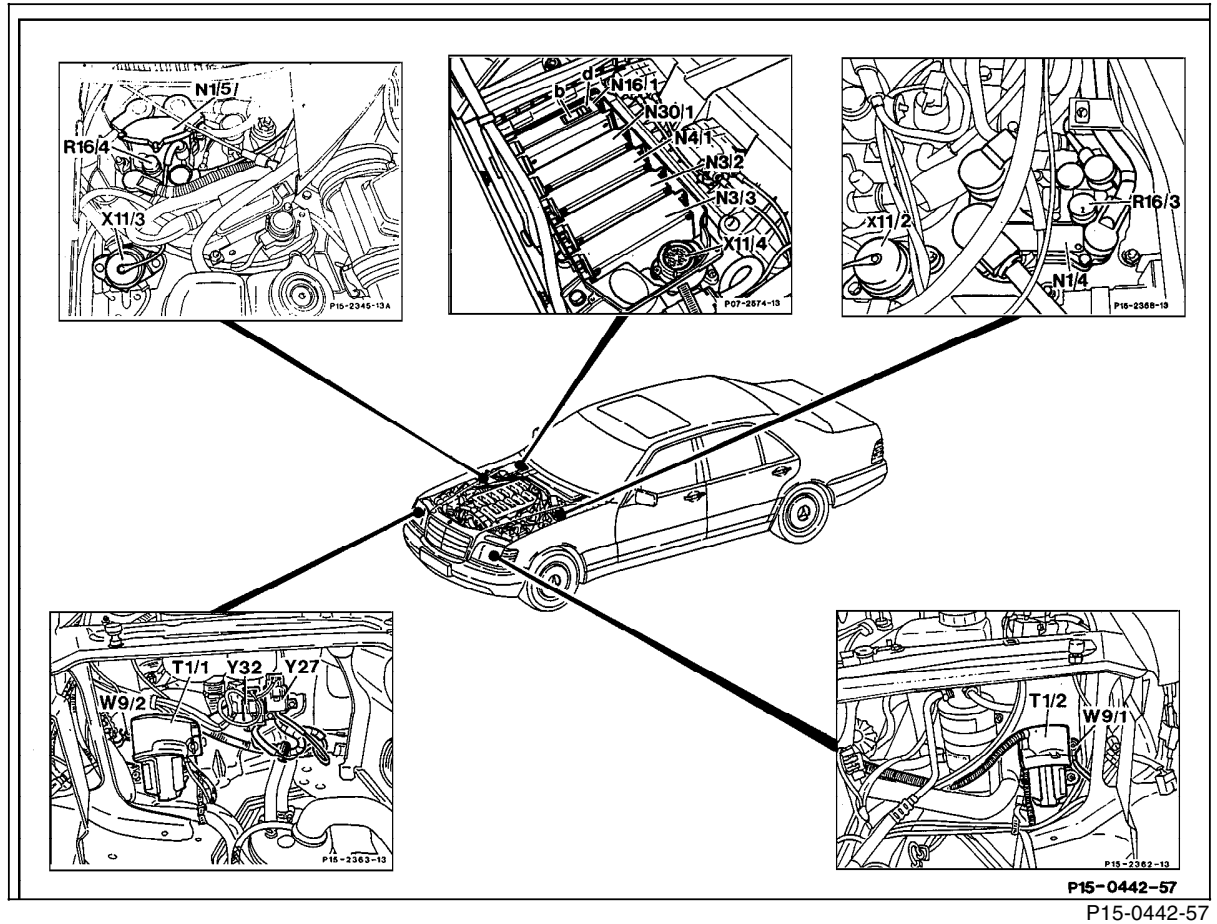

Electrical Test Program - Component Locations

Engine 120 LH-SFI

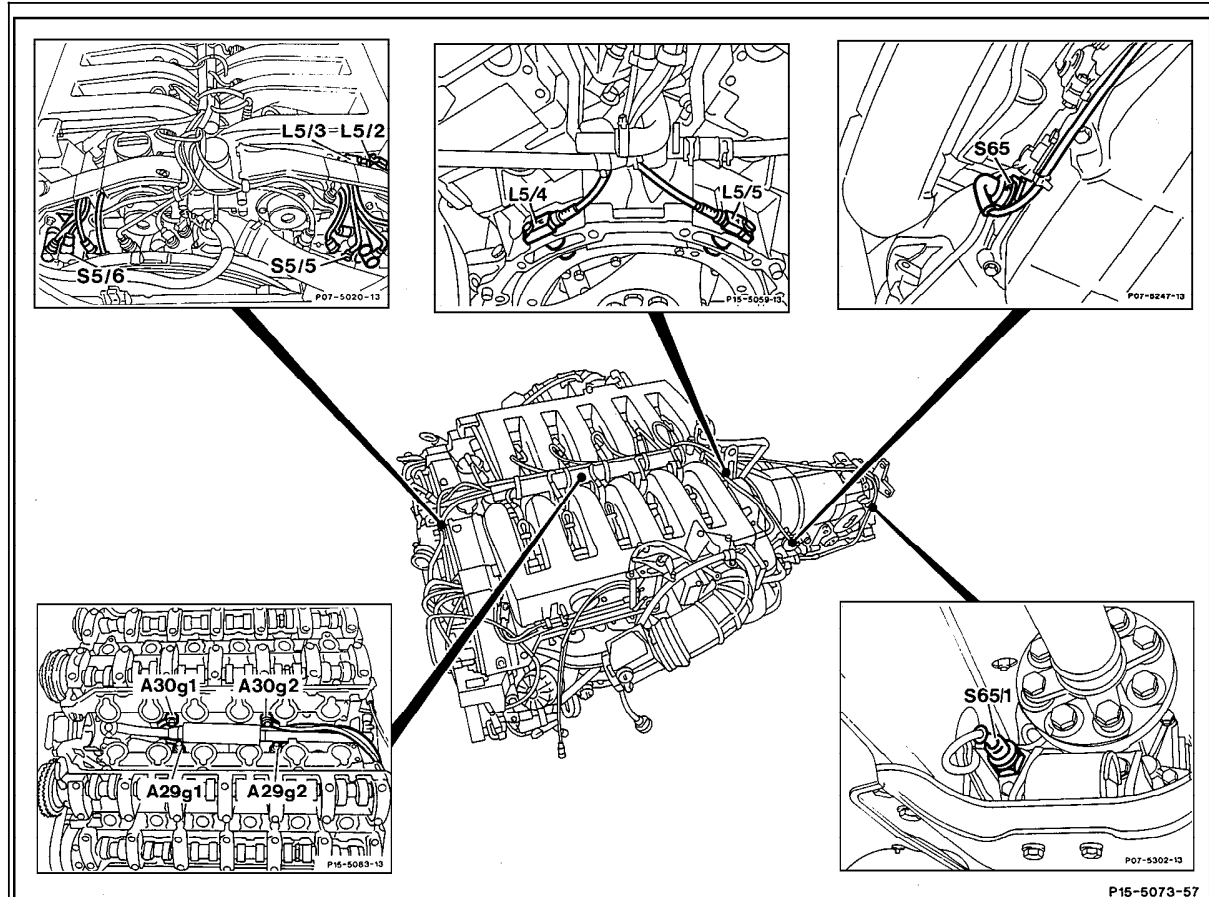


Figure 2

- A29 Left knock sensors
- A29g1 Left knock sensor 1
- A29g2 Left knock sensor 2
- A30 Right knock sensors
- A30g1 Right knock sensor 1
- A30g2 Right knock sensor 2
- L5/2 Left camshaft position sensor
- L5/3 Right camshaft position sensor
- L5/4 Left crankshaft position sensor
- L5/5 Right crankshaft position sensor
- S5/5 Left high-voltage distributor
- S5/6 Right high-voltage distributor
- S65 Transmission overload protection switch (brake band B1)
- S65/1 Transmission overload protection switch (brake band B2)

P15-5073-57
P15-5073-57