

Electrical Test Program - Component Locations

Engine 104

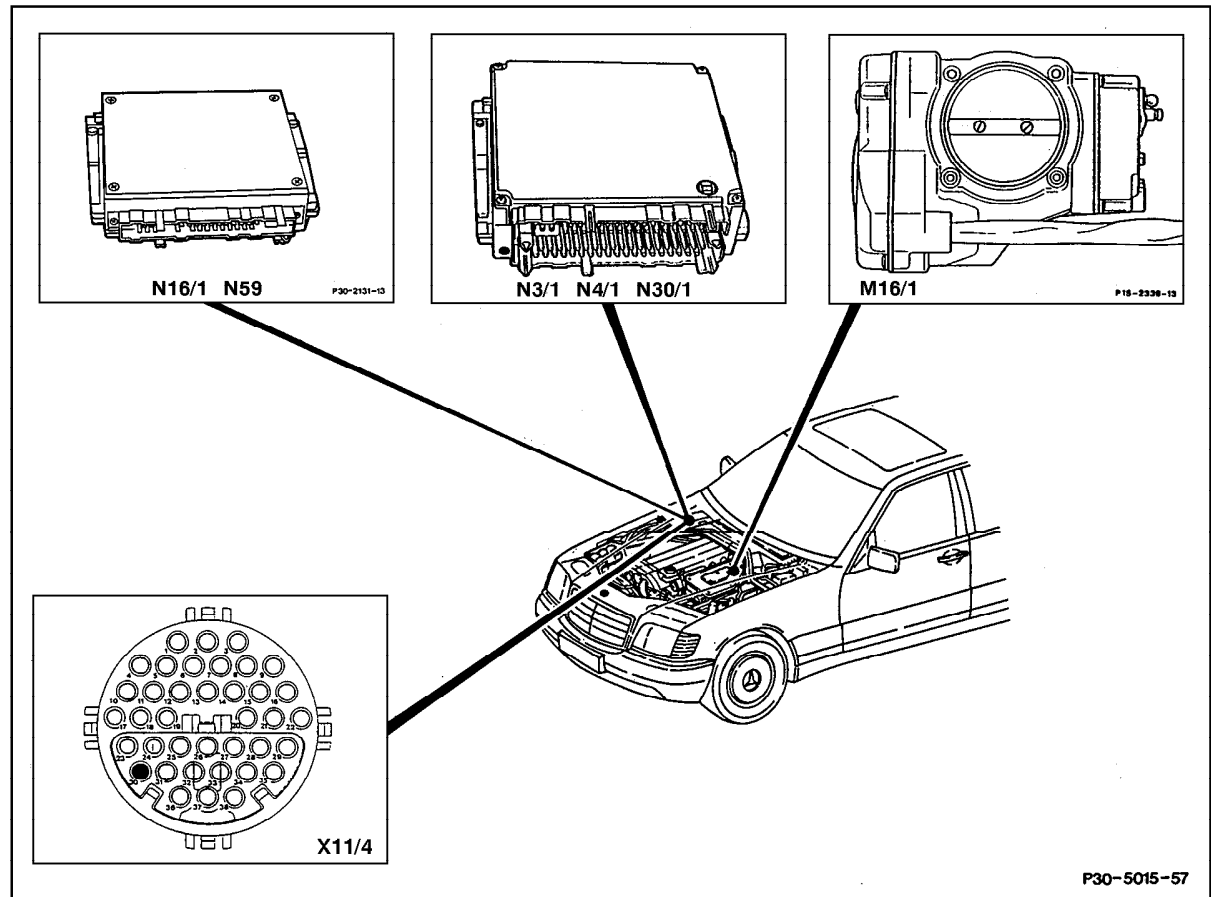


Figure 1

- M16/1 Electronic accelerator/cruise control actuator
- N3/1 LH-SFI control module
- N4/1 EA/CC/ISC control module
- N16/1 Base module
- N30/1 ABS/ASR control module
- N59 Diagnostic module (OBD I)
- X11/4 Data link connector (DTC readout)

P30-5015-57

P30-5015-57

Electrical Test Program - Component Locations

Engine 104

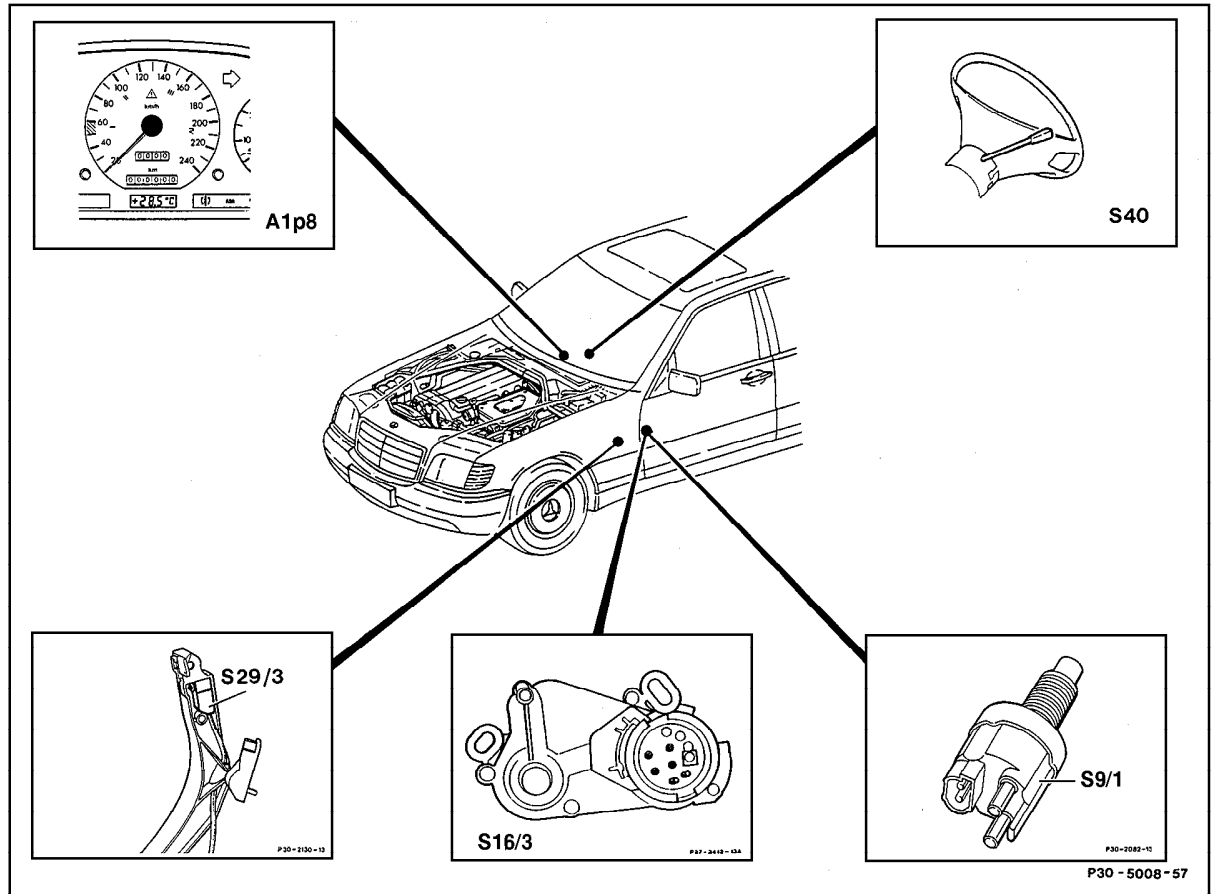


Figure 2

- A1p8 Electronic speedometer
- S9/1 Stop lamp switch (ASR) (4-pole)
- S16/3 Starter lock-out/backup lamp switch (transmission range recognition)
- S29/3 Closed throttle position switch
- S40 Cruise control switch
 - V Decelerate/set
 - B Accelerate/set
 - SP Resume
 - A Off

P30-5008-57

Electrical Test Program - Component Locations

Engine 119

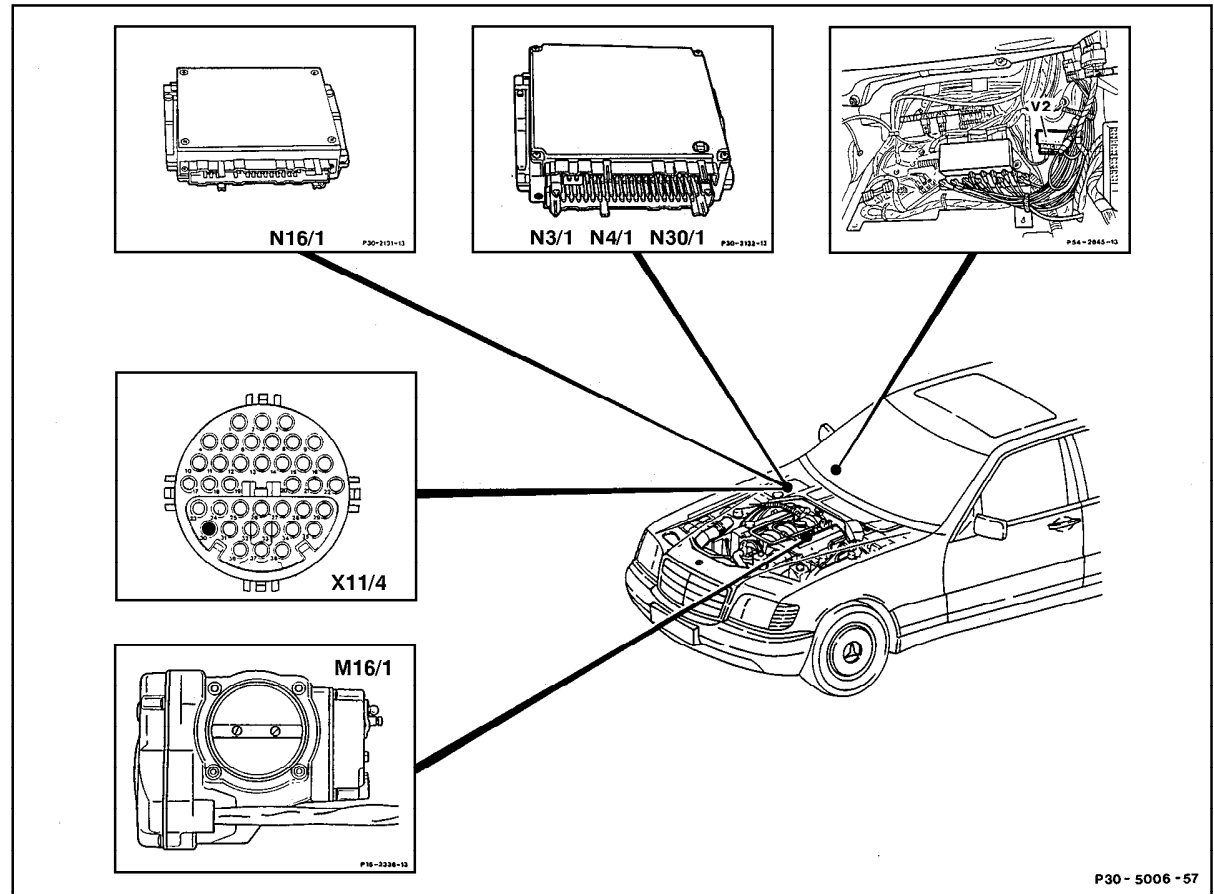


Figure 3

- M16/1 Electronic accelerator/cruise control actuator
- N3/1 LH-SFI control module
- N4/1 EA/CC/ISC control module
- N16/1 Base module
- N30/1 ABS/ASR control module
- N59 Diagnostic module (OBD I)
- X11/4 Data link connector (DTC readout)
- V2 Engine rpm increase diode matrix (right footwell, model 140 with engine 119 only)

P30-5006-57

P30-5006-57

Electrical Test Program - Component Locations

Engine 119

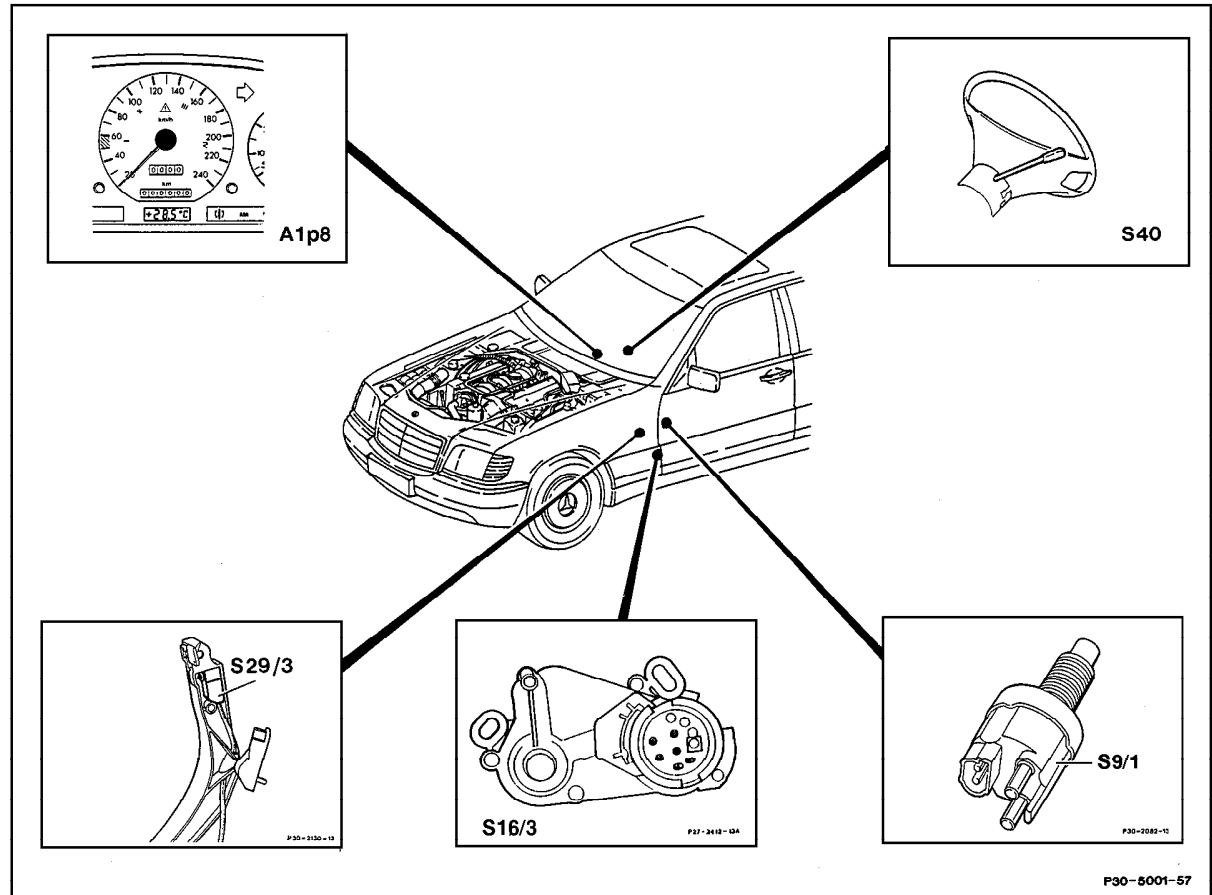


Figure 4

- A1p8 Electronic speedometer
- S9/1 Stop lamp switch (ASR) (4-pole)
- S16/3 Starter lock-out/backup lamp switch (transmission range recognition)
- S29/3 Closed throttle position switch
- S40 Cruise control switch
- V Decelerate/set
- B Accelerate/set
- SP Resume
- A Off

P30-5001-57