

Electrical Test Program - Component Locations

Model 124

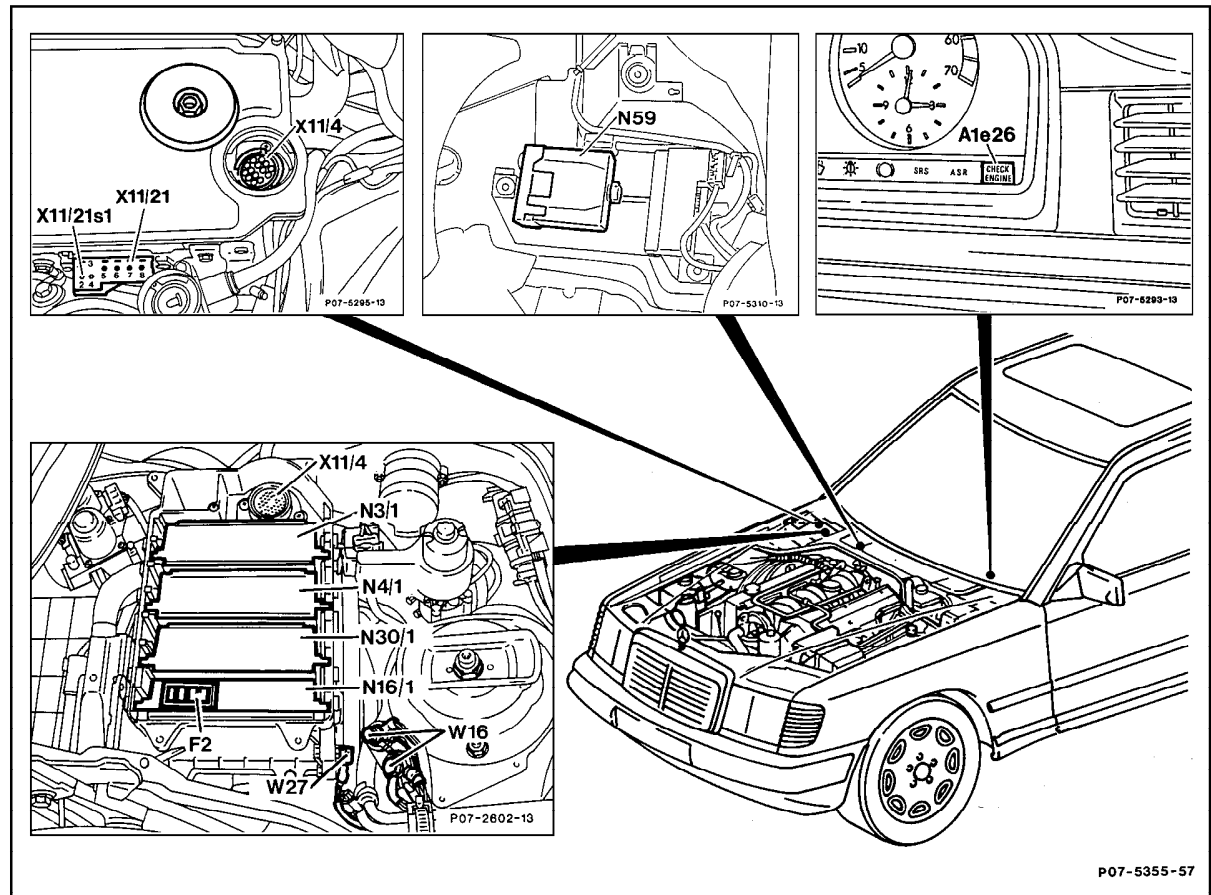


Figure 1

- A1e26 "CHECK ENGINE" malfunction indicator lamp
- F2 Fuse, LH-SFI control module voltage supply
- N3/1 LH-SFI control module
- N4/1 Electronic accelerator/cruise control/idle speed control module
- N16/1 Base module
- N30/1 ABS/ASR control module
- N59 Diagnostic module
- X11/4 Diagnostic connector (diagnostic trouble code, 38-pole)
- X11/21 Diagnostic module test connection
- X11/21s1 Pushbutton with LED

P07-5355-57

P07-5355-57