

## Electrical Test Program - Component Locations

Model 140

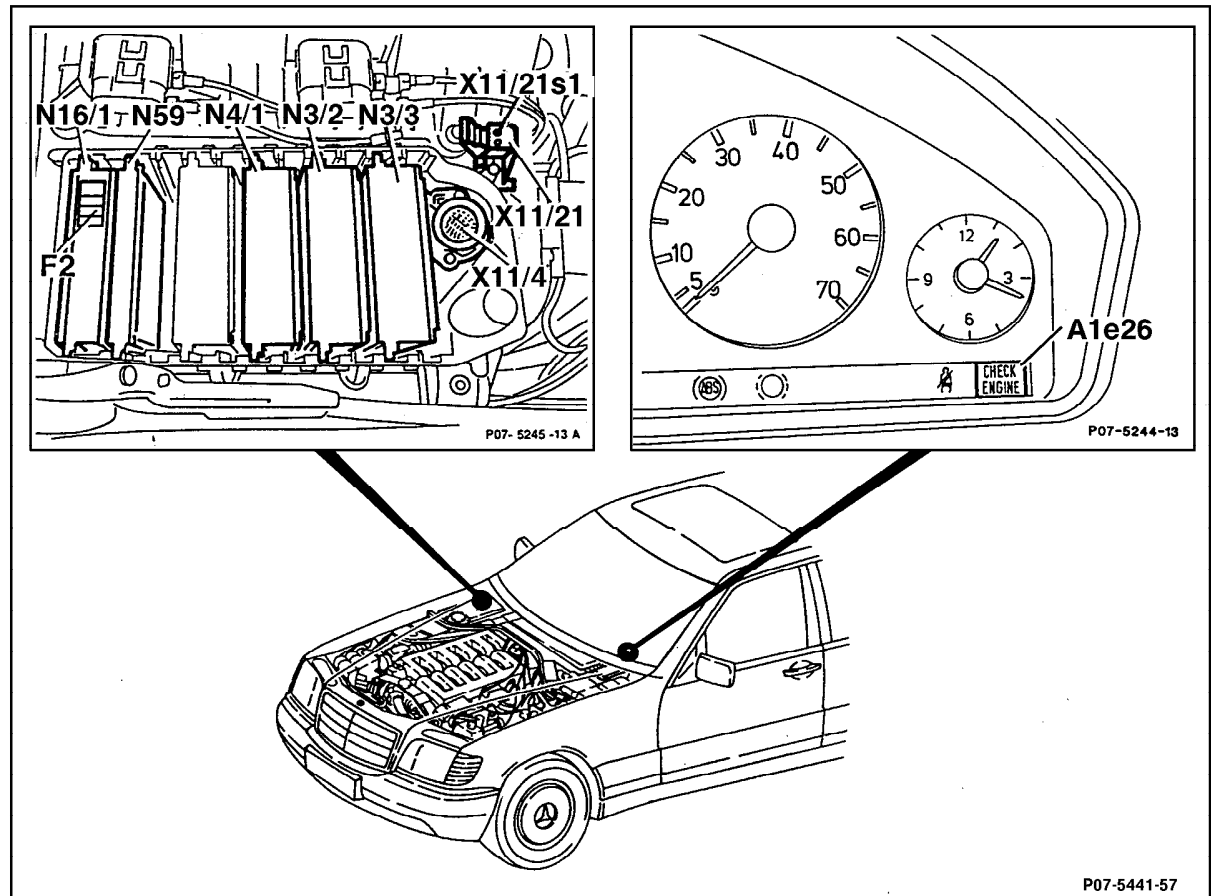


Figure 1

- A1e26 "CHECK ENGINE" malfunction indicator lamp
- N3/2 Left LH-SFI control module
- N3/3 Right LH-SFI control module
- N4/1 Electronic accelerator/cruise control/idle speed control module
- N16/1 Base module
- N59 Diagnostic module
- X11/4 Diagnostic connector (diagnostic trouble code, 38-pole)
- X11/21 Diagnostic module test connection
- X11/21s1 Pushbutton (with LED)

P07-5441-57