## **Electrical Test Program – Component Locations**

Model 210

## Figure 1


E3e1 Turn signal lamp left
E4e1 Turn signal lamp right
E6/1 Left turn signal lamp
E6/2 Right turn signal lamp
E22/1 Left auxiliary turn signal lamp
E22/2Right auxiliary turn signal lamp

K40/2 Driver-side fuse and relay module box

N10/1 Signal pickup and activation module (SAM) left front

N73 Electronic ignition lock control module

S4s1 Turn signal switch S6/1s1 Hazard flasher switch

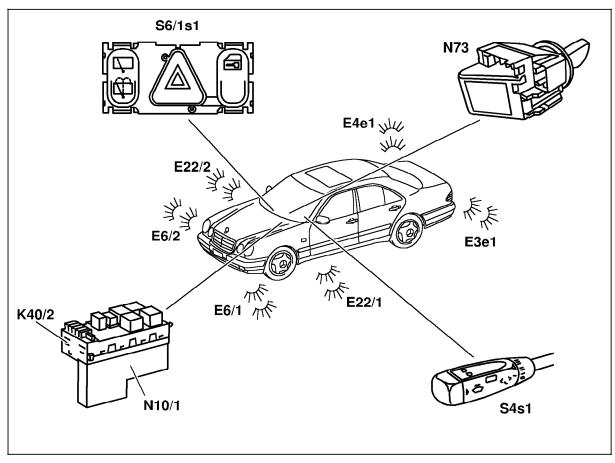

P82.25-0237-06

## **Electrical Test Program – Component Locations**

Components connection Model 210

## Figure 2


Instrument cluster Α1 E3e1 Turn signal lamp left E4e1 Turn signal lamp right E6/1 Left turn signal lamp E6/2 Right turn signal lamp Left auxiliary turn signal lamp E22/2Right auxiliary turn signal lamp

K40/2 Driver-side fuse and relay module box

Signal pickup and activation module (SAM) left front

Electronic ignition lock control module N73

S4s1 Turn signal switch S6/1s1 Hazard flasher switch

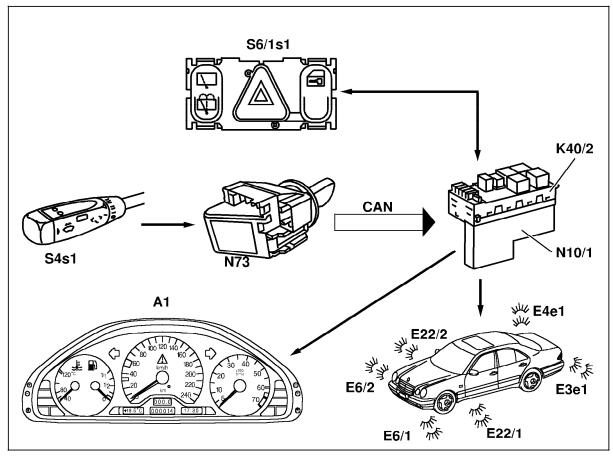

P82.25-0238-06