

Electrical Test Program – Component Locations

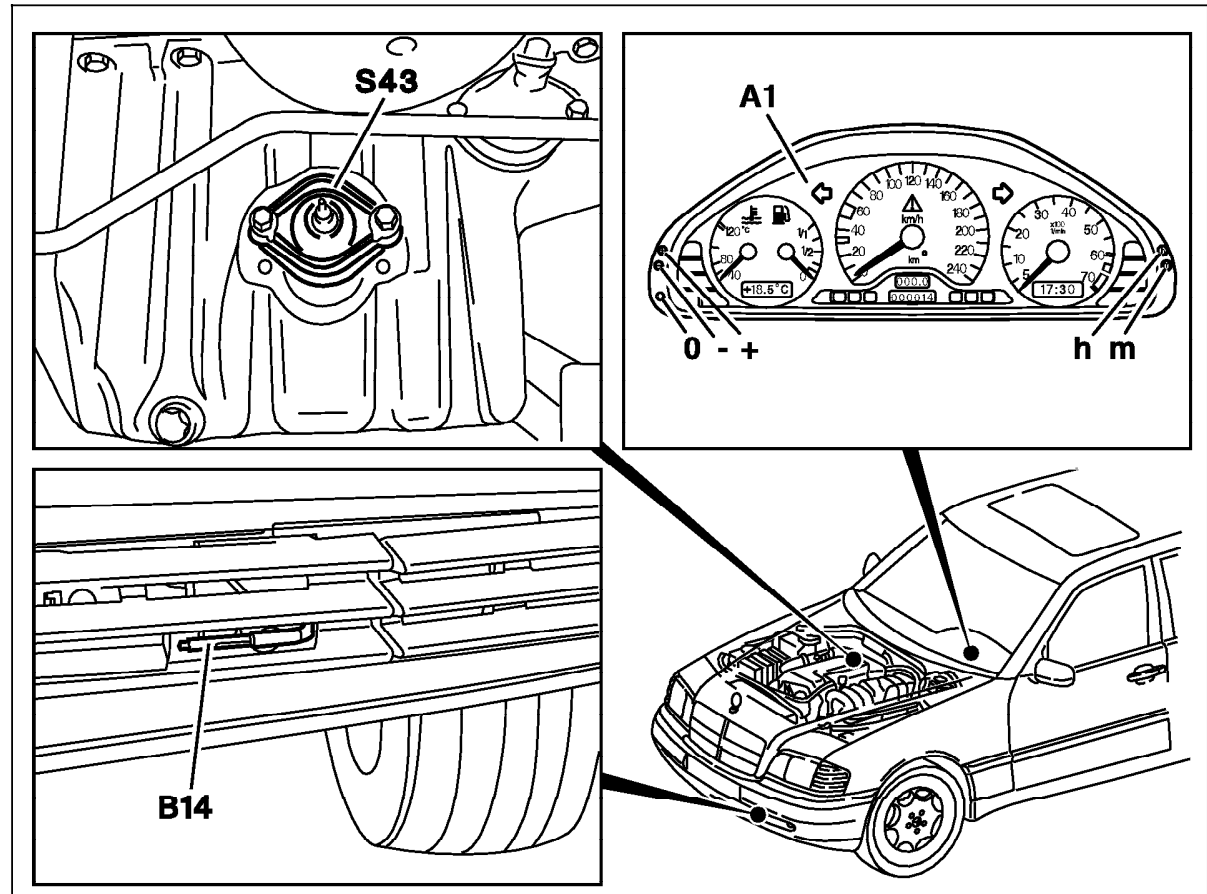


Figure 1

- A1 Instrument cluster
- B14 Outside temperature indicator temperature sensor
- S43 Oil level switch

P54.30-0333-57

Electrical Test Program – Component Locations

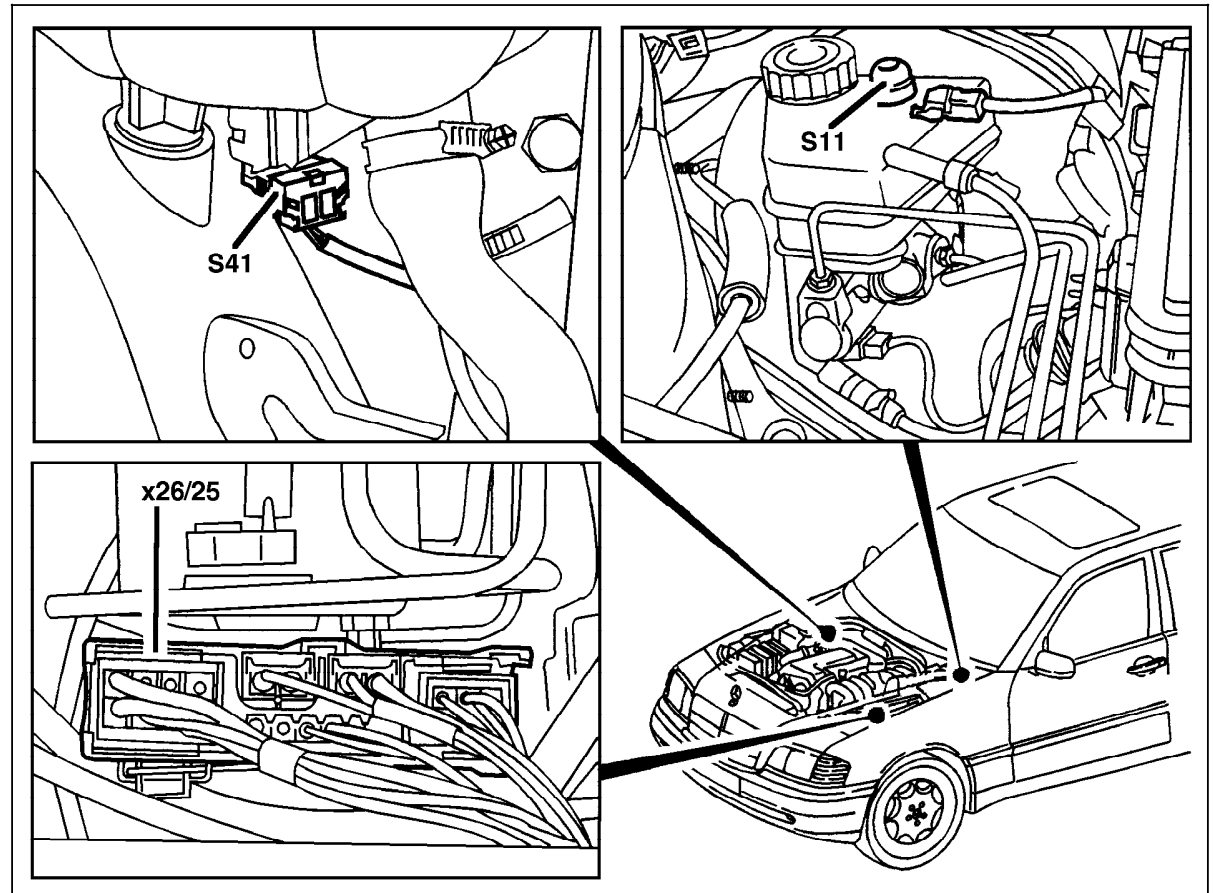


Figure 2

- S11 Brake fluid level switch
- S41 ECL switch
- X26/25 Engine/chassis connector (24-pole)

P54-6095-57

Electrical Test Program – Component Locations

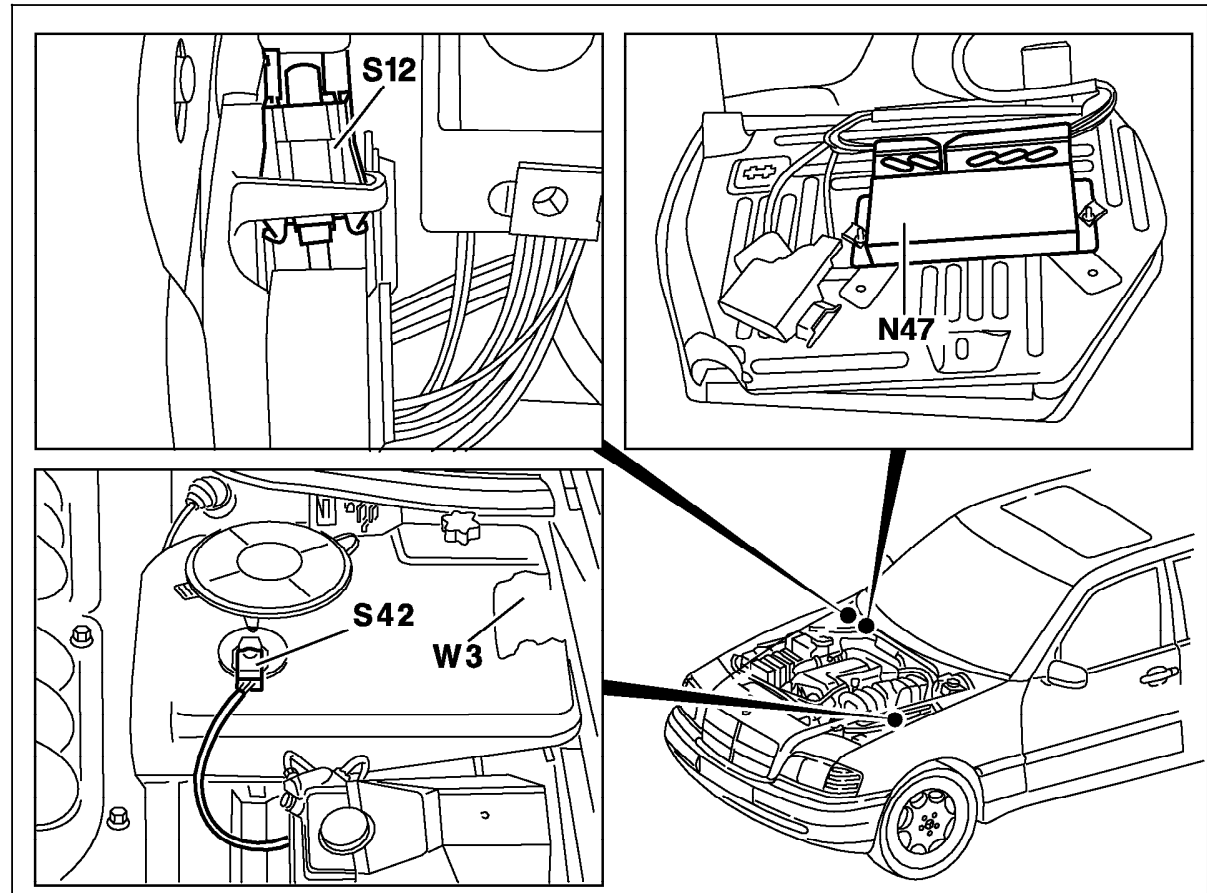


Figure 3

- N47 Traction system control module
- S12 Parking brake switch
- S42 Windshield washer fluid level switch

P54.30-0334-57

Electrical Test Program – Component Locations

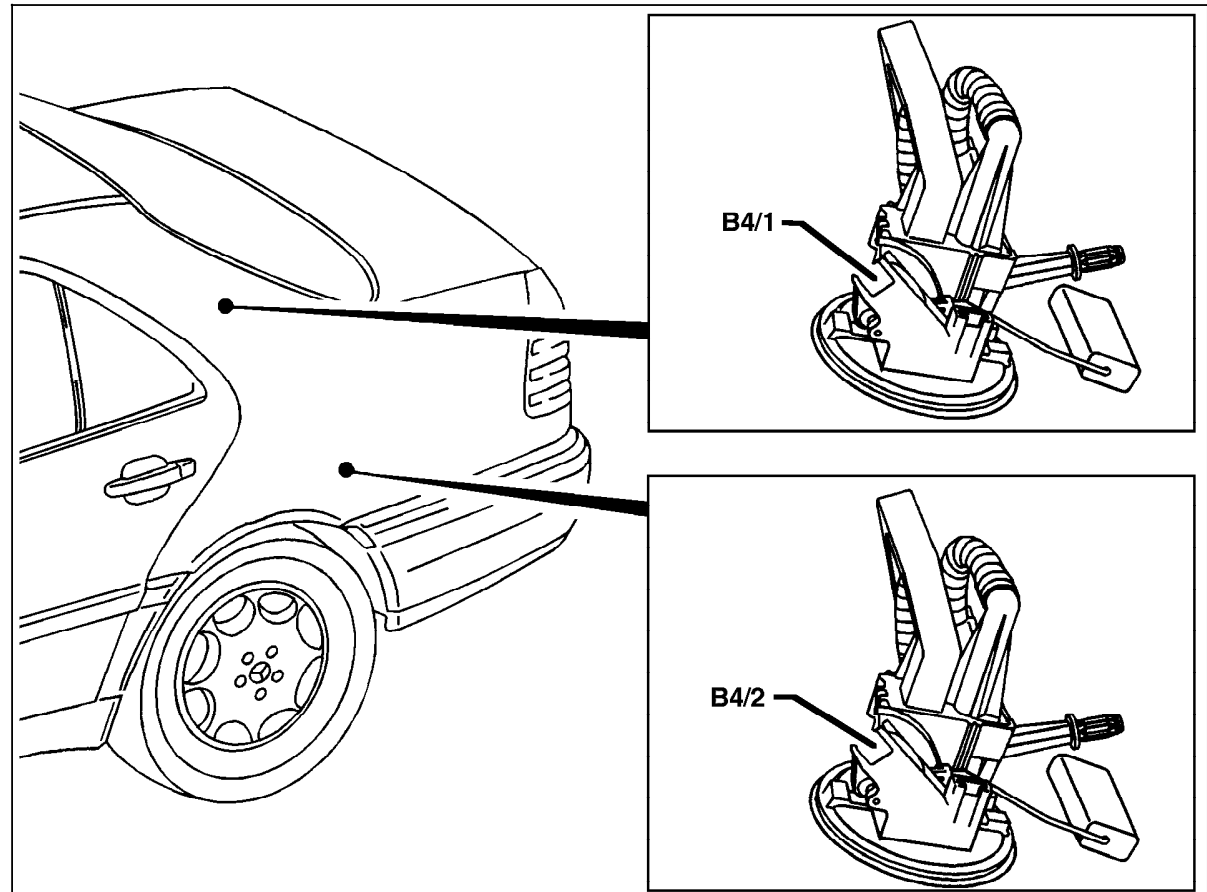


Figure 4

- B4/1 Left fuel level sensor
- B4/2 Right fuel level sensor

P54-6125-57

Electrical Test Program – Component Locations

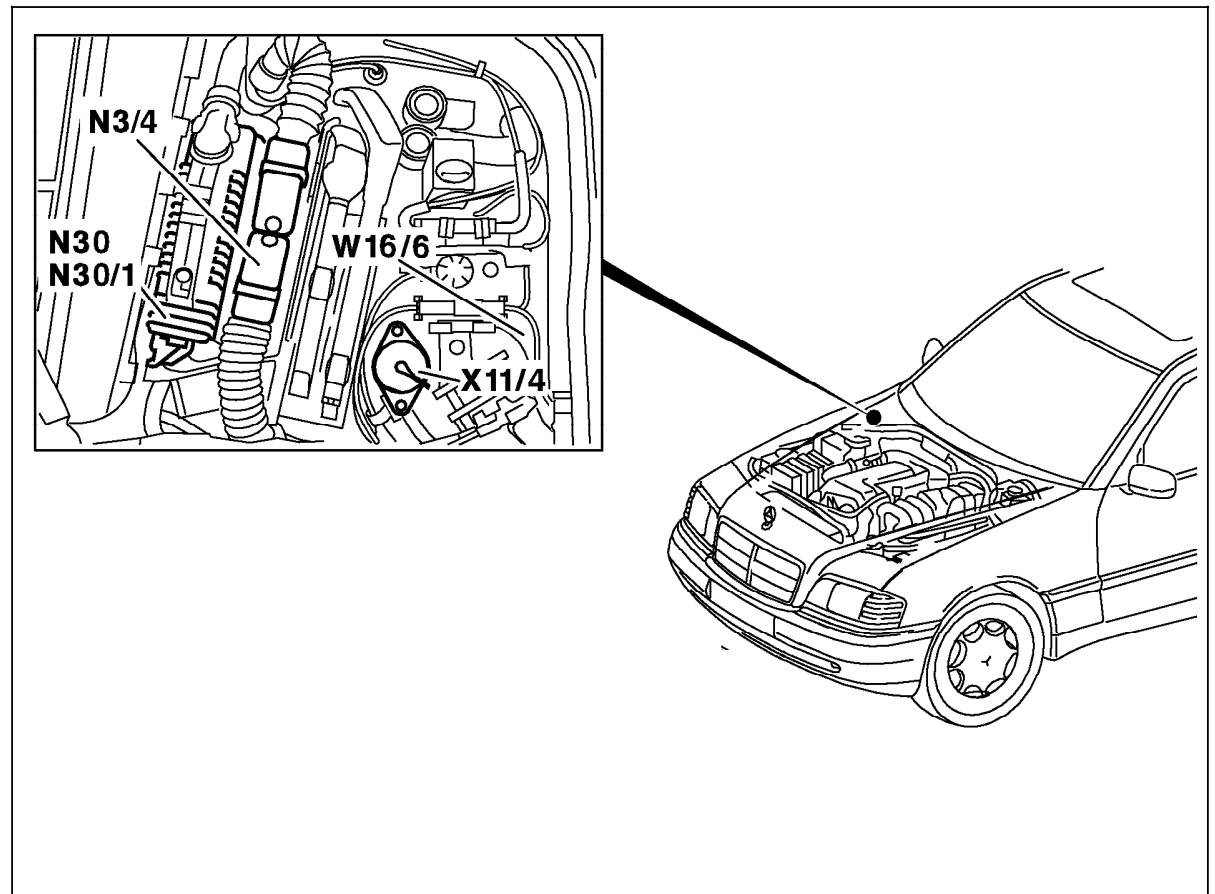


Figure 5

- N3/4 Engine control module (HFM-SFI)
- W16/6 Ground (component compartment)
- X11/4 Data line connector (DTC)

U54.30-0335-57