

### Diagnosis – Function Test

#### General Information

#### Malfunction indicator/warning lamps

The instrument cluster is fully equipped with all lamps regardless of actual vehicle equipment.

#### Bulb test

- Turn the ignition key to position “2”. All malfunction indicator/warning lamps must illuminate.

After 4 seconds, the SRS MIL will extinguish.

After 30 seconds all other indicator/warning lamps will extinguish, with the exception of the following: ABS, ASD or ASR, and generator charging lamps.

Start engine. At > 480 engine RPM, all indicator/warning lamps are to extinguish, indicating that all systems monitored are O.K.

The indicator instruments must reflect the actual operating conditions.

#### CAUTION!

Should the malfunction indicator/warning lamps remain illuminated and/or come on while driving, it will be necessary to check the corresponding system with the Diagnostic Manual and/or the monitored fluid level as necessary.