

7.2 Cellular Telephone (CTEL)

Models 129 and 140, up to M.Y. 1993

Electrical Test Program – Call Placement/Reception Test

⇒	Test scope	Test connection	Test condition	Nominal value	Possible cause/Remedy
1.0	Call placement In Use indicator		Ignition: ON Radio: ON CTEL: ON Handset securely in cradle. Known good service area. Place call from CTEL to landline telephone (vehicle should be outside). Call is in progress.	Indicator lights up.	24, 27.
1.1	Audio switchover		Call is in progress.	Radio is muted, TEL appears on radio faceplate.	26
1.2	Intercept tone (alternating high/low tone)		Call is in progress.	No audible tone heard.	Number dialed incorrectly, Cellular service not activated: contact carrier.
1.3	Fast-busy signal		Call is in progress.	No fast-busy signal heard.	If fast-busy signal: cellular system busy (no open channel), contact carrier if problem persists.

Electrical Test Program – Call Placement/Reception Test

⇒	Test scope	Test connection	Test condition	Nominal value	Possible cause/Remedy
1.4	Hands-free function		Call went through to landline telephone. Handset securely in cradle.	Hands-free microphone functions. Audio heard through vehicle CTEL speakers.	27, 28. 25 ⇒ 1.0 (model 129), 25 ⇒ 4.0 (model 140), Wiring.
1.5	Handset function		Call went through to landline telephone. Remove handset from cradle. Terminate telephone call (Press <i>END</i>).	Handset is functional. No audio through vehicle CTEL speakers.	27

7.2 Cellular Telephone (CTEL)

Models 129 and 140, up to M.Y. 1993

Electrical Test Program – Call Placement/Reception Test

⇒	Test scope	Test connection	Test condition	Nominal value	Possible cause/Remedy
2.0	Call reception Audio switchover		Ignition: ON Radio: ON CTEL: ON Handset securely in cradle. Known good service area. Place call from landline telephone to CTEL (vehicle should be outside). Call is in progress. Incoming radio mute feature programmed in second menu.	Radio is muted, TEL appears on radio faceplate.	Verify Menu programming, 26
2.1	Ringing tone		Call is in progress.	Audible ringing is heard through vehicle CTEL speakers.	25 ⇒ 1.0 (model 129) 25 ⇒ 4.0 (model 140)
2.2	IDC display		Call is in progress.	IDC display indicates INC CALL PRESS SNO and display backlighting flashes.	Contact carrier, 27.

Electrical Test Program – Call Placement/Reception Test

⇒	Test scope	Test connection	Test condition	Nominal value	Possible cause/Remedy
2.3	Hands-free function		Call went through to CTCL. Handset securely in cradle.	Hands-free microphone functions. Audio heard through vehicle CTCL speakers.	27, 28. 25 ⇒ 1.0 (model 129), 25 ⇒ 4.0 (Model 140), Wiring.
2.4	Handset function		Call went through to CTCL. Remove handset from cradle. Terminate telephone call (Press <i>END</i>).	Handset is functional. No audio through vehicle CTCL speakers.	27