

### Diagnosis – Diagnostic Trouble Code (DTC) Memory



#### Preparation for Test

1. Connect Hand-Held Tester (HHT) to X11/4, according to diagram.
2. Ignition: **ON**
3. Read out Diagnostic Trouble Codes (DTC's) and actual values from ultrasonic PTS control module (N62).
4. Perform activations using HHT.
5. Ignition: **OFF**
6. Delete stored fault codes and repeat step 3 after 20 seconds.



#### Note:

DTC readout is not possible using impulse counter scan tool.

Perform the complete check of the Parktronic system if in case of a complaint no DTC is stored in the control module.