

Electrical Test Program - Component Locations (Backup Assist)

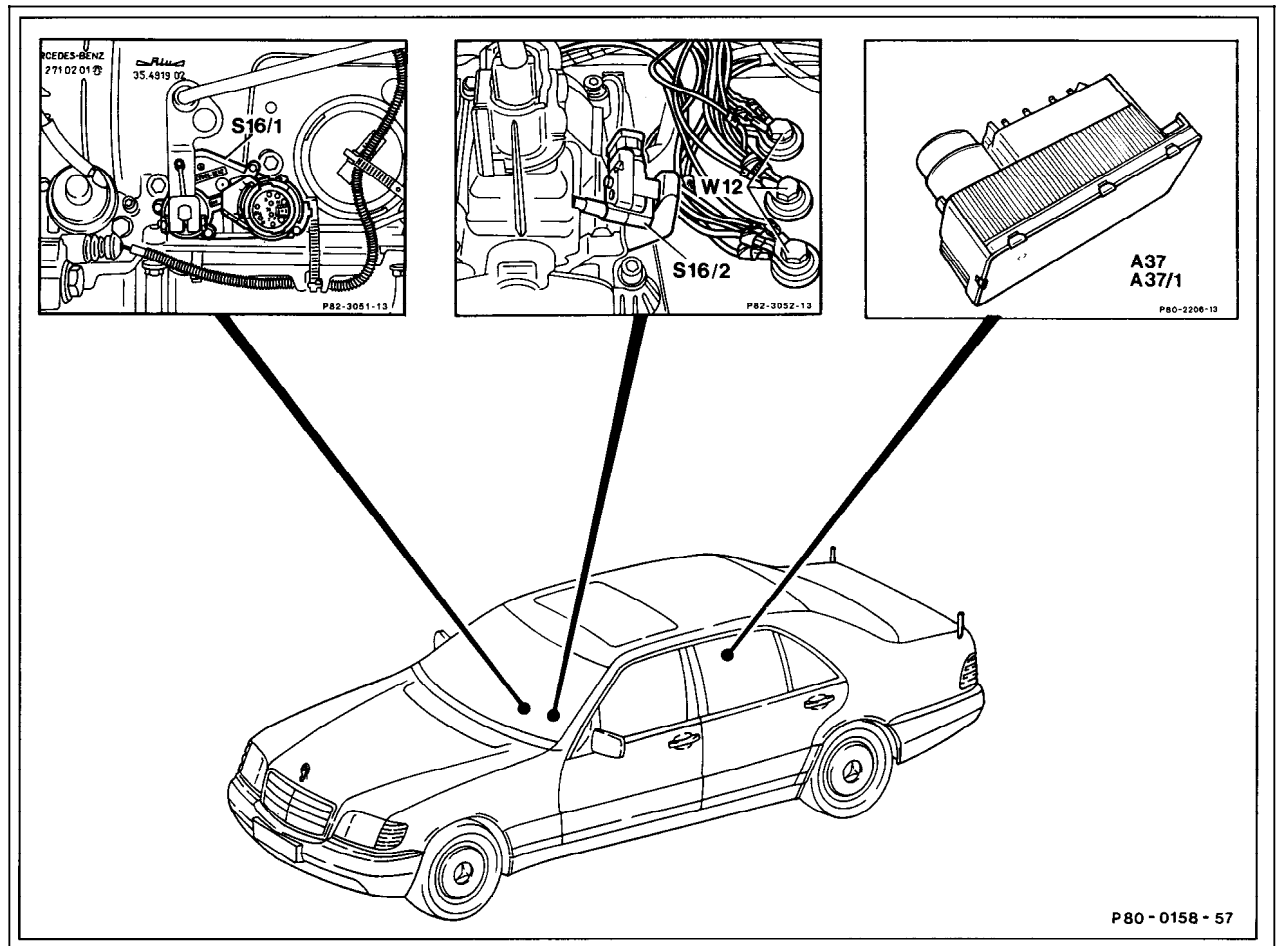


Figure 1  
A37, A37/1 PSE control module  
S16/1 Starter lock-out/backup lamp switch

P80-0158-57