
Component Locations on Front Axle, in Engine Compartment and in Instrument Cluster Model 124

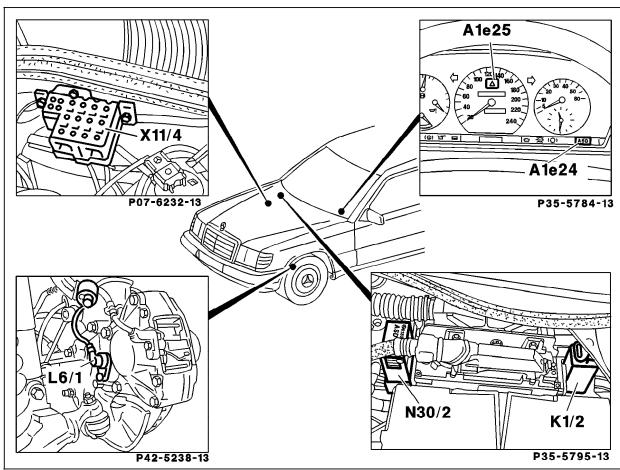

A1e24 ASD MIL
A1e25 ASD warning lamp
L6/1 Left front axle VSS sensor
L6/2 Right front axle VSS sensor
K1/2 Overvoltage protection relay module
N30/2 ASD control module
X11/4 Data link connector (DTC readout)



P35-5774-57

Electrical Components in Right Rear Chassis, on Rear Axle and in Passenger Compartment Model 124

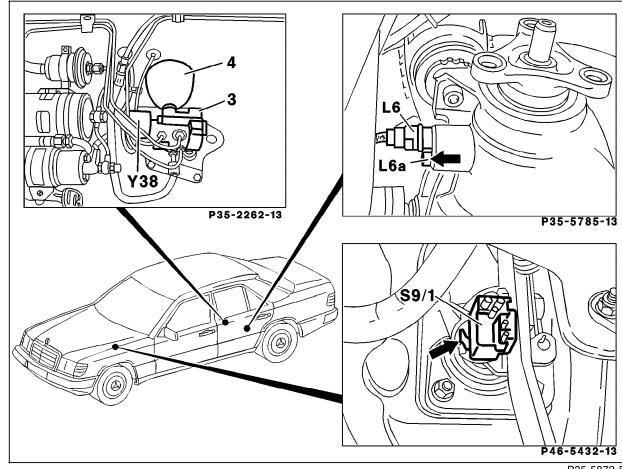


Figure 2

L6 Rear axle VSS sensor S9/1 Stop lamp switch (4-pole)

Y38 ASD valve

P35-5872-57

Electrical Components in Engine Compartment, and Passenger Compartment Model 129


Figure 3

A1e24 ASD MIL

A1e25 ASD warning lamp

K1/2 Overvoltage protection relay module

N30 ABS control module
N30/2 ASD control module
S9/1 Stop lamp switch (4-pole)
X11/4 Data link connector (DTC readout)

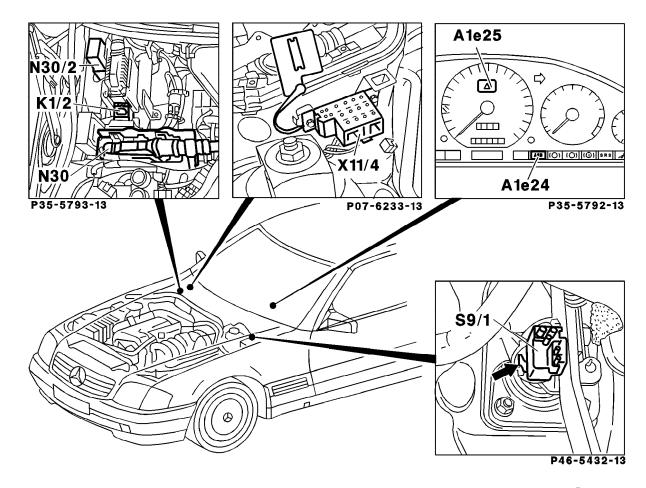

P35-5782-57

Electrical Components in Right Rear Chassis, on Front and Rear Axles Model 129


Figure 4

L6 Rear axle VSS sensor L6/1 Left front axle VSS sensor

L6/2 Right front axle VSS sensor (not shown)
X62/14 Left front axle VSS sensor connector (axle

spindle)

Y38 ASD valve

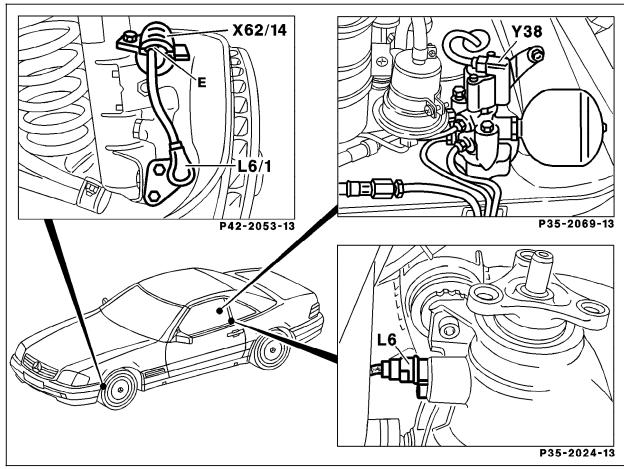

P35-5873-57

Electrical Components in Engine Compartment and Passenger Compartment Model 201

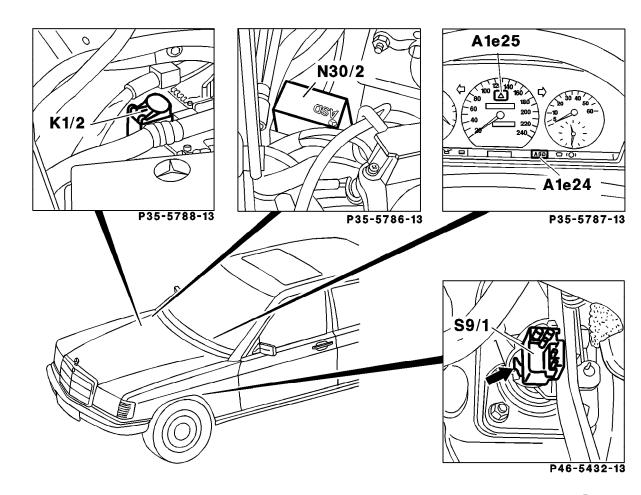


Figure 5

A1e24 ASD MIL

A1e25 ASD warning lamp

K1/2 Overvoltage protection relay module

N30/2 ASD control module S9/1 Stop lamp switch (4-pole)

P35-5776-57

Electrical Components in Engine Compartment, on Front and Rear Axle and ASD Valve Location Model 201


Figure 6

L6 Rear axle VSS sensor L6/1 Left front axle VSS sensor

L6/2 Right front wheel VSS sensor (not shown)

X11/4 Data link connector (DTC readout)

Y38 ASD valve

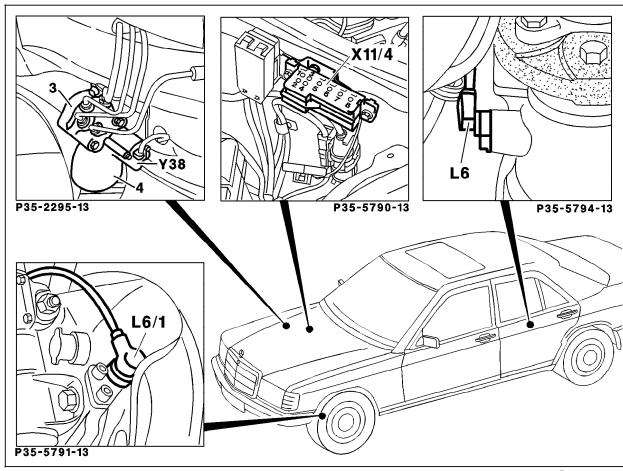

P35-5874-57