

Electrical Test Program – Preparation for Test

Preliminary work:

Diagnosis - Malfunction Memory 11

WARNING!

Risk of severe injury when touching ignition parts which produce high voltages. Do not touch ignition components.

Persons with heart pacemakers are not to perform repairs on this type of ignition system.

1. Review 11, 21, 22, 23, 24, 31, 33, 35, 36,
2. Review section 0,
3. Connect HHT and readout DTC memory, see 11,
4. Ignition: **OFF**
5. Connect test cable with socket box to engine control module (N3/10).



Connector with red marking is not required at this time since the engine control module has presently no function installed for it. When disconnecting the connectors on the engine control module remove center connector (D) first, when reconnecting connectors install center connector (D) last.

Note:

The test program is divided into four sections:

- 23 SFI Test
- 24 Ignition System Test
- 25 EA System Test
- 26 CC System Test

Note regarding “Test Connection” column:


The numbers indicated in parentheses, for example, ⇒ 1.0 (2A) signify:

2 = Socket 2 on wiring diagram.

A = Connector A on wiring diagram,


Electrical Test Program – Preparation for Test

Special Tools

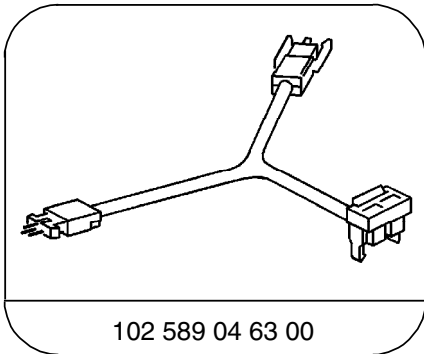


102 589 04 63 00

Test cable

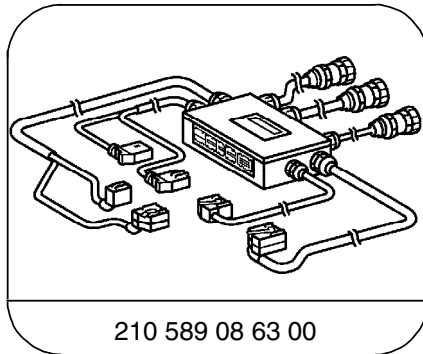


210 589 08 63 00

145-pin test cable

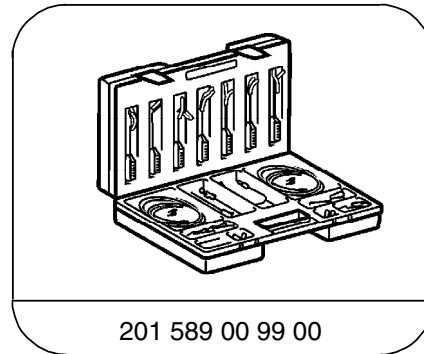


201 589 00 99 00

Electrical connecting set

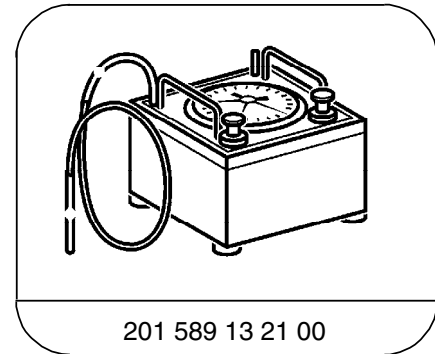


201 589 13 21 00

Tester

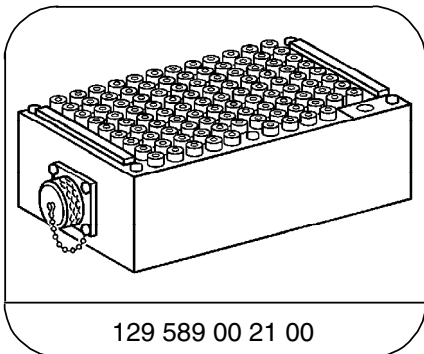

129 589 00 21 00

126-pin socket box

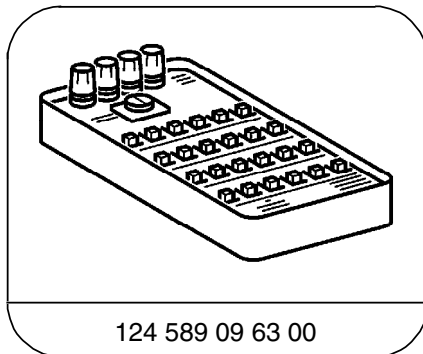

124 589 09 63 00

Ohm decade

Test equipment; See MBUSA Standard Service Equipment Program


Description	Brand, model, etc.
Digital multimeter	Fluke models 23, 77 III, 83, 85, 87
Engine analyzer	Bear DACE Hermann Electronic

Electrical Test Program – Preparation for Test**⚠ WARNING!**

Risk of severe injury when touching ignition parts which produce high voltages. Do not touch ignition components. Persons with heart pacemakers are not to perform repairs on this type of ignition system.

Electronic ignition systems produce dangerous high voltages on both the primary circuit and the secondary (ignition) circuits. Due to the high voltages produced, contact with any of the voltage carrying components can be dangerous to your health (burns, heart palpitations, cardiac arrest etc).

- Ignition must be turned OFF prior to performing any repair work on the ignition system.
- Do not come in contact or remove with any of the ignition components while the engine is cranking or idling.
- Wear rubber soled shoes.
- Disconnect connectors for CKP sensor at sensor or control module.
- If repairs require that the ignition be turned on, then dangerous voltages will be present through out the entire ignition system.
- No exposed metal connectors or sending units may be installed in the ignition wires.

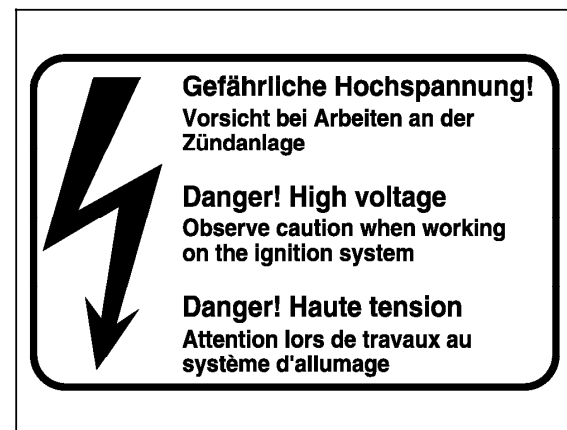

P15.11-0001-01

Electrical Test Program – Preparation for Test

To Avoid Damage to the Ignition System

- To avoid damage to the engine control module, connect/disconnect the control module connectors only with the ignition: **OFF**.
- Circuit 1 of the ignition coil may not be shorted to ground, e.g. theft deterrence.
- Only original equipment should be installed in the ignition system.
- Do not operate the ignition system at cranking speed unless the entire ignition harness is connected.
- Do not perform any tests (grounding of ignition cable 4 disconnecting a spark plug connector or pulling cable 4 out of the ignition coil) at cranking or idle speed.
- The high output side of the ignition system must carry at least 2 kΩ of load (spark plug connector).
- If assisting a disabled vehicle and it becomes necessary to perform an ignition spark test, perform this test only on one ignition/spark plug. Ensure a good ground connection to the spark plug.
- ME - SFI: the ignition system is to be turned OFF, when cranking engine to perform compression tests, additionally, it is necessary to disconnect connector 2 from the control module.
- CFI/LH-SFI: disconnect connector(s) on DI control module for CKP sensor (L5).
- CFI/LH-SFI: The DI control module, which is mounted on the wheel arch, is coated with a heat absorbing paste to enhance the dissipation of heat, therefore do not remove the foil strip, since this has no effect on the heat dissipation.

i Engine 120 has separate ignition and fuel injection system

Using Test Equipment

- **Ensure that the engine and ignition are OFF when connecting/disconnecting test equipment to a coil.**
- **Connect the secondary voltage measuring equipment on the corresponding secondary ignition lead only when engine is stopped and ignition is OFF.**
- **If the circuit breaker is activated (power balance test), and the engine stalls, then the test procedure with this tester cannot be performed.**
- **Do not connect a test lamp to circuit 1 and 15 of the ignition coil.**

Electrical Test Program – Preparation for Test

Connection Diagram - Socket Box

Note:
When disconnecting the connectors on the engine control module remove center connector (D) first, when reconnecting connectors install center connector (D) last.



 **Connector with red marking is not required at this time since the engine control module has presently no function installed for it.**

Figure 1


- 001 Engine control module connectors
- 003 Digital multimeter
- 050 Socket box (126-pole)
- 108 Test cable
- N3/10 Engine control module (ME-SFI)
- II1/63 Socket box and test cable connections
- III64/126 Socket box and test cable connections
- A-F Connections

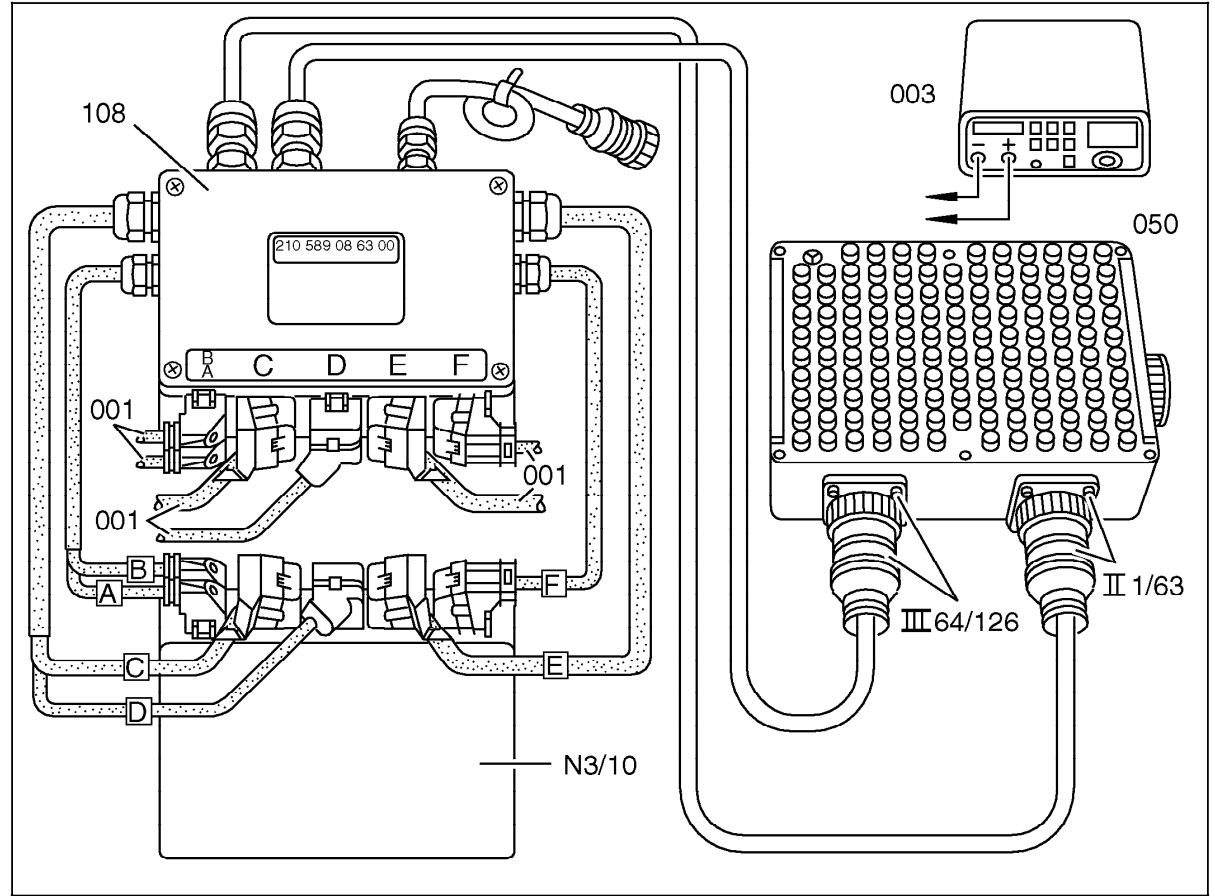

P07.61-0267-06

Electrical Test Program – Preparation for Test

Connector Layout - Engine Control Module

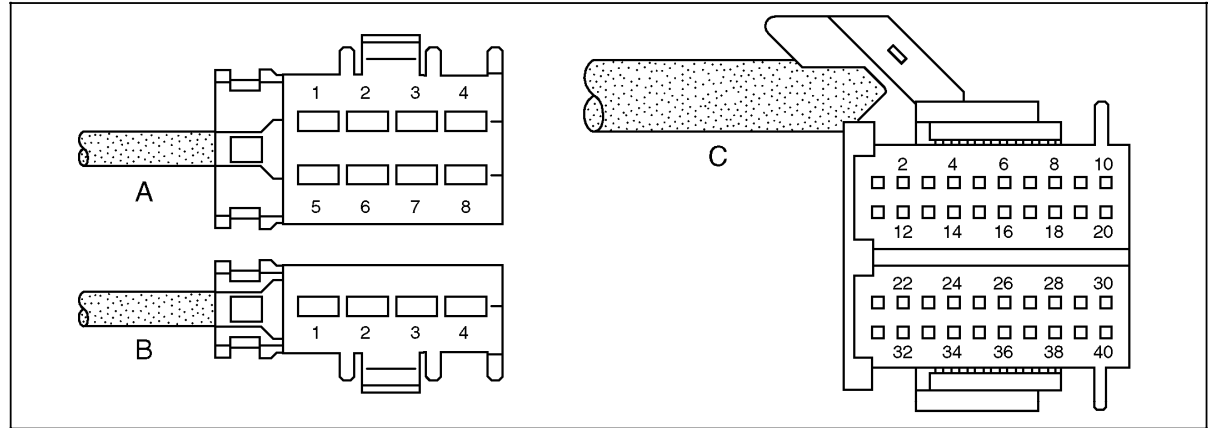


P07.61-0251-04

Figure 2

1A	Left O2S 1 heater (before TWC)	1C – 20C	–	28C	AIR pump relay module (only USA)
2A	Voltage supply (circuit 87), fused	21C	Purge control valve	29C	Fuel pump relay module
3A	Ground, Model 163/202/208/210: component compartment W16	22C	Pedal value sensor (+ nominal value potentiometer 1)	30C	–
4A	–	23C	Pedal value sensor (– nominal value potentiometer 1)	31C	Right O2S 1 ground (right before TWC)
5A	O2S 1 heater (before TWC)	24C	Pedal value sensor (nominal value potentiometer 1 wiper)	32C	Right O2S 1 signal (right before TWC)
6A	Engine/climate control electric cooling fan control	25C	Pedal value sensor (nominal value potentiometer 2 wiper)	33C	Left O2S 1 signal (left before TWC)
7A	Ground, Model 163: component compartment W16/6 Model 202/208/210: component compartment W16	26C	Pedal value sensor (– nominal value potentiometer 2)	34C	Left O2S 1 ground (left before TWC)
8A	Ground, Model 163: component compartment W16/6 Model 202/208/210: component compartment W16	27C	Pedal value sensor (+ nominal value potentiometer 2)	35C-37C	–
1B	O2S 2 heater (right after TWC) (only USA)				
2B	O2S 2 heater (left after TWC) (only USA)				
3B	Diagnosis connection (data link connector)				
4B	Voltage supply (circuit 30)				

Electrical Test Program – Preparation for Test

Connector Layout - Engine Control Module

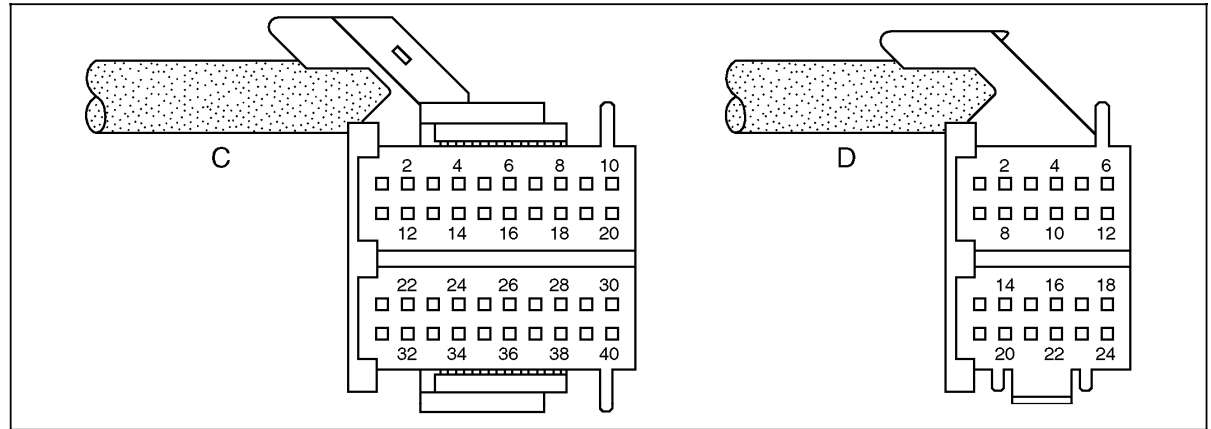

P07.61-0252-04

Figure 3

38C Data link connector (engine rpm signal)
 39C Data link connector (ME-SFI DTC's)
 40C Signal (circuit 50)


1D FP relay module (K27)
 2D Activated charcoal canister shut-off valve (only USA)
 3D Starter relay
 4D Ground, fuel tank pressure sensor (only USA)
 5D Signal, fuel tank pressure sensor (only USA)
 6D Voltage supply 5 V for fuel tank pressure sensor (only USA)
 6D Voltage supply 5 V for fuel tank pressure sensor (only USA)

7D Right O2S 2 ground (right after TWC) (only USA)
 8D Right O2S 2 signal (right after TWC) (only USA)
 9D Left O2S 2 signal (left after TWC) (only USA)
 10D Left O2S 2 ground (left after TWC) (only USA)
 11D CAN data bus "H"
 12D CAN data bus "L"
 13D Variable speed limit regulation (without DAS 3 only)
 14D Backup lamp switch
 15D -
 16D Crash signal (as of 06/98)
 17D Kick-down switch (only MT as of 06/98)
 18D -
 19D P/N recognition with AT
 20D CC switch (accelerate/set) (without DAS 3 only)
 21D CC switch (decelerate/set) (without DAS 3 only)
 22D CC switch (resume) (without DAS 3 only)
 23D CC switch (control contact) (without DAS 3 only)
 24D CC switch (off) (without DAS 3 only)

1E Injector cyl. 2
 2E Injector cyl. 5
 3E-4E -
 5E EGR switchover valve

Electrical Test Program – Preparation for Test

Connector Layout - Connector 1, interior for ME-SFI control module

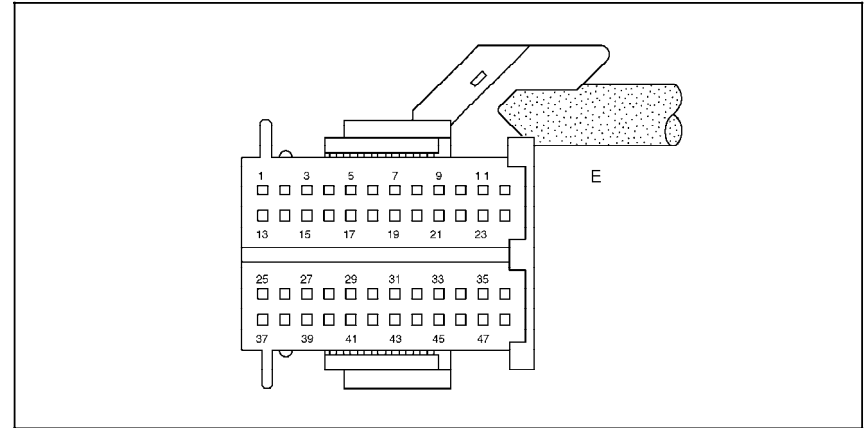


P07.61-0253-05

Figure 4

6E – 9E	–	28E	ETC sensor ground
10E	AIR pump switchover valve(only USA)	29E	ECT sensor signal
11E	–	30E	–
12E	Resonance intake manifold switchover valve	31E	EA/CC/ISC actuator (actual value potentiometer 1 wiper)
13E	Injector cyl. 3	32E	EA/CC/ISC actuator (actual value potentiometer ground)
14E	Injector cyl. 6	33E	Actual value potentiometer voltage supply
15E	Voltage supply 5 V, oil sensor (level/temperature/quality)	34E	EA/CC/ISC actuator (actual value potentiometer 2 wiper)
16E	Ground for oil sensor (level/temperature/quality)	35E – 36E	–
17E	Signal for oil sensor (level/temperature/quality)	37E	CKP sensor ground
18E – 21E	–	38E	CKP sensor signal
22E	Voltage supply 5 V, pressure sensor (only USA)	39E	Camshaft Hall-effect sensor ground
23E	Pressure sensor signal (only USA)	40E	Camshaft Hall-effect sensor signal
24E	Pressure sensor ground (only USA)		
25E	Injector cyl. 1		
26E	Injector cyl. 4		
27E	AIR pump relay in relay module (only USA)		

Electrical Test Program – Preparation for Test

Connector Layout - Engine Control Module

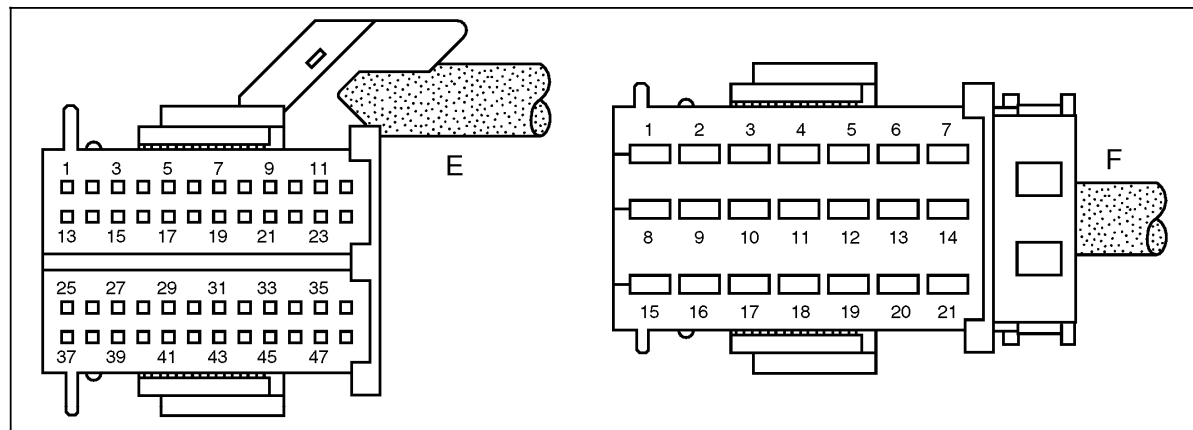

P07.61-0254-04

Figure 5

41E	KS 1 ground (right cylinder side of engine)	1F	EA/CC/ISC actuator (-)	13F	Ignition coil T1/4, a cyl. 4
42E	KS 1 signal (right cylinder side of engine)	2F	EA/CC/ISC actuator (+)	14F	Ignition coil T1/4, b cyl. 4
43E	KS 2 ground (left cylinder side of engine)	3F	-	15F	Ground, Model 163: component compartment W16, Model 202/208/210: component compartment W16/6
44E	KS 2 signal (left cylinder side of engine)	4F	Ignition coil T1/5 b cyl. 5	16F	Ignition coil T1/2, b cyl. 2
45E	IAT sensor (in hot film MAF sensor)	5F	Ignition coil T1/5 a cyl. 5	17F	Ignition coil T1/2, a cyl. 2
46E	Hot film MAF sensor voltage supply 5 V	6F	Ignition coil T1/3 a cyl. 3	18F	Ignition coil T1/6, b cyl. 6
47E	Hot film MAF sensor signal	7F	Ignition coil T1/3 b cyl. 3	19F	Ignition coil T1/6, a cyl. 6
48E	Hot film MAF sensor ground	8F	Ground, Model 163: component compartment W16, Model 202/208/210: component compartment W16/6	20F	Ignition coil T1/1, a cyl. 1
		9F - 12F	-	21F	Ignition coil T1/1, b cyl. 1